


SERVICE MANUAL

BG2T CHASSIS

<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>	<u>MODEL</u>	<u>COMMANDER</u>	<u>DEST.</u>	<u>CHASSIS NO.</u>
<i>KV-HA14L80</i>	<i>RM-969</i>	<i>ME</i>	<i>SCC-U67H-A</i>				
<i>KV-HA14P50</i>	<i>RM-969</i>	<i>GE</i>	<i>SCC-U69E-A</i>				

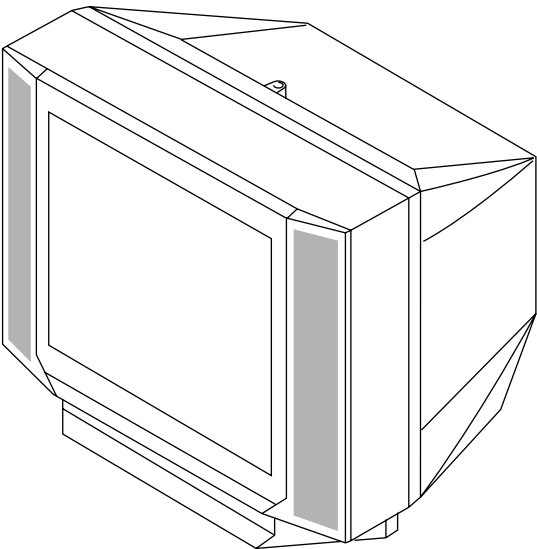

TRINITRON[®] COLOR TV
SONY[®]

SPECIFICATIONS

		Note
Power requirements	110-240 V AC, 50/60 Hz	
Power consumption (W)	Indicated on the rear of the TV	
Television system	B/G	
Color system	PAL, PAL 60, NTSC3.58 (AV IN), NTSC4.43, SECAM PAL, PAL 60, NTSC3.58 (AV IN), NTSC4.43	(KV-HA14L80) (KV-HA14P50)
Channel coverage B/G	VHF: E2 to E12 UHF: E21 to E69 CATV: S01 to S03, S1 to S41	
⌚ (Antenna)	75-ohm external terminal	
Audio output (Speaker)	3W + 3W	
Number of terminal		
📺 Video	Input: 2* Output: 1 Phono jacks; 1 V _{P-P} , 75 ohms	* One input line available
🎵 Audio	Input: 2* Output: 1 Phono jacks; 500 mV _{rms}	* One input line available
🎧 (Headphone)	Output: 1 Stereo minijack	
Picture tube	14 in.	
Tube size (cm)	37	Measured diagonally
Screen size (cm)	34	Measured diagonally
Dimension (w/h/d, mm)	466 × 346 × 419	
Mass (kg)	13	

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
SELF DIAGNOSTIC FUNCTION		4	5. DIAGRAMS		
1. GENERAL		7	5-1. Block Diagram		26
2. DISASSEMBLY			5-2. Circuit Boards Location		28
2-1. Rear Cover Removal		11	5-3. Schematic Diagram		29
2-2. Speaker Removal		11	(1) A Board Schematic Diagram		30
2-3. Chassis Assy Removal		11	(2) C Board Schematic Diagram		32
2-4. Service Position		11	5-4. Voltage Measurement		33
2-5. Terminal Bracket Removal		11	5-5. Waveforms		35
2-6. Replacement Of Parts		11	5-6. Printed Wiring Boards and Parts Location		36
2-6-1. Replacement Of Light Guide		11	5-7. Semiconductors		39
2-6-2. Replacement Of Power Button		11	6. EXPLODED VIEWS		
2-7. Degauss Coil Removal		12	6-1. Picture Tube and Chassis		41
2-8. Picture Tube Removal		12	7. ELECTRICAL PARTS LIST		42
3. SET-UP ADJUSTMENTS					
3-1. Beam Landing		14			
3-2. Convergence		15			
3-3. Focus Adjustment		17			
3-4. G2 (SCREEN) and White Balance Adjustments ...		17			
4. CIRCUIT ADJUSTMENTS					
4-1. Adjustment With Commander		18			
4-2. Adjustment Method		18			
4-3. Picture Quality Adjustment		24			
4-4. Deflection Adjustment		24			
4-5. A Board Adjustment After IC003 (MEMORY) Replacement		24			
4-6. Picture Distortion Adjustment		25			

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.

The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occurred if the screen displays a "0".


Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F4601 (F)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP) • Horizontal deflection overdrive	2 times	002:000 or 002:001~255	• H.OUT Q801 is shorted. (A board)	• Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE) • Vertical deflection stopped	4 times	004:000 or 004:001~225	• -13V is not supplied. (A board) • IC 551 faulty (A board)	• Vertical deflection pulse is stopped
• Micro reset	—	101:00 or 101:001~225	• Discharge CRT (C Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.

The symptom that is diagnosed first by the microcontroller is displayed on the screen.


Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

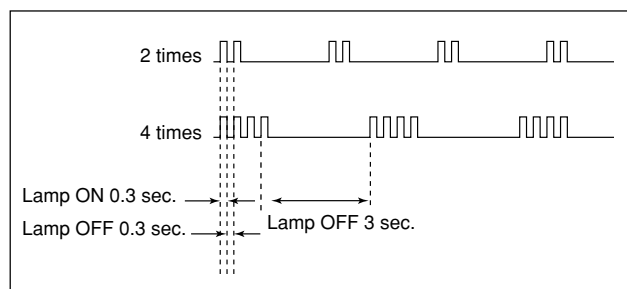

Diagnostic Item	Flash Count*
+B overcurrent/overvoltage	2 times
Vertical deflection stopped	4 times

* One flash count is not used for self-diagnostic.

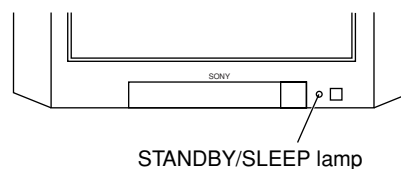

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as "power sometimes shuts off" or "screen sometimes goes out" that cannot be confirmed, it is possible to bring up past occurrences of failure for confirmation on the screen:


[To Bring Up Screen Test]

In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display → channel [5] → Sound volume [-] → Power ON
↑

Note that this differs from entering the service mode (mode volume [+]).

Self-Diagnosis screen display

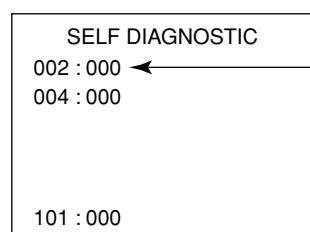

Numeral "0" means that no fault has been detected.

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]


To clear the result display to “0”, press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel [8] ➡ 0

[Quitting Self-diagnostic screen]

To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

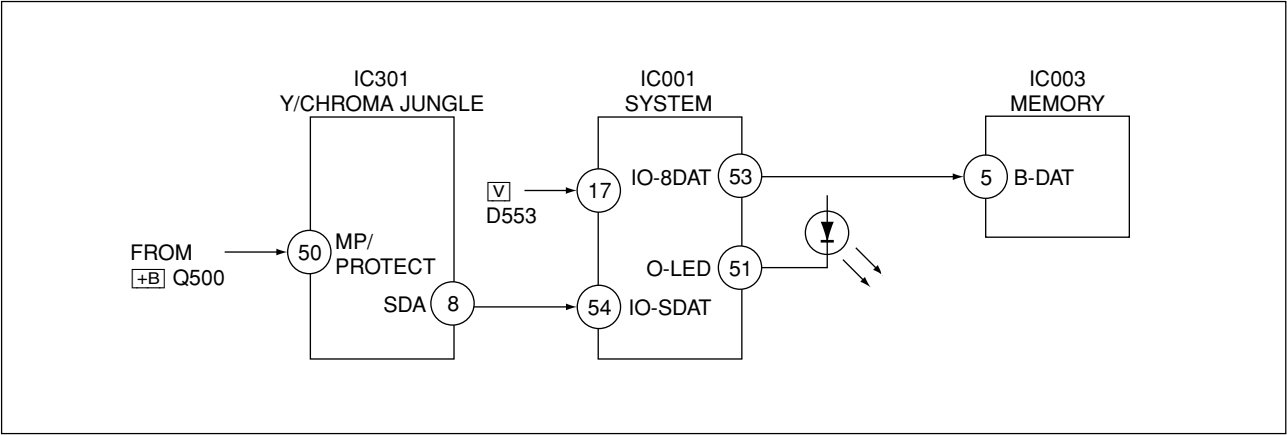

[+B overcurrent (OCP)]

Occurs when an overcurrent on the +B(135) line is detected by Q500. If Q500 go to ON and the voltage to pin 50 of IC301 more than 3.5V when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.

[Vertical deflection stopped]

Occurs when an absence of the vertical deflection pulse is detected by Pin 17 and IC001 shut down the power supply.

[White balance failure]


If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture.

* (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

The operating instruction mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

SECTION 1 GENERAL

A Getting Started (KV-HA14L80)

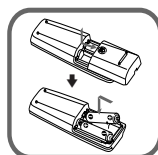


Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old batteries nor use different types of batteries together.

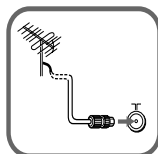


Step 2

Connect the antenna cable (not supplied) to T (antenna input) at the rear of the TV.


Tip

- You can also connect your TV to other optional components. (See **B**)

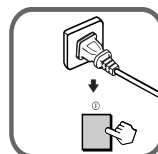

Step 3

Plug in the power cord, then press ① on the TV to turn it on.

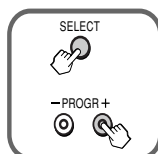


Step 4

Press SELECT and PROG+ on the TV at the same time for one to two seconds to preset the channels automatically. (See **D**)

Tip

- To stop the automatic channel presetting, press SELECT.

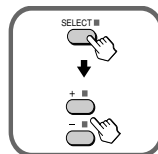


Step 5


Press SELECT on the remote until "LANGUAGE/اللغة: ENGLISH" appears on the screen, then press + or - to change the on-screen display language.

B WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V A.C.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid that leaks from the batteries touches you, immediately wash it away with water.

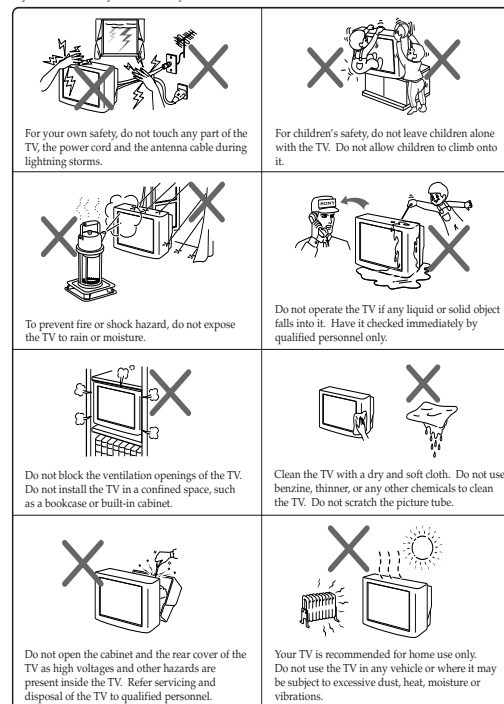

A Getting Started (KV-HA14P50)

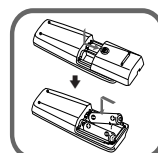


Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old batteries nor use different types of batteries together.

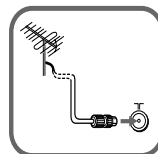


Step 2

Connect the antenna cable (not supplied) to T (antenna input) at the rear of the TV.


Tip

- You can also connect your TV to other optional components. (See **B**)

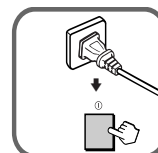

Step 3

Plug in the power cord, then press ① on the TV to turn it on.

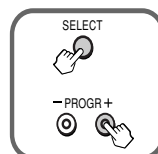


Step 4

Press SELECT and PROG+ on the TV at the same time for one to two seconds to preset the channels automatically. (See **D**)

Tip


- To stop the automatic channel presetting, press SELECT.

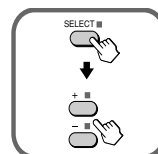

Step 5

Press SELECT on the remote until "LANGUAGE/الغة: ENGLISH" appears on the screen, then press + or - to change the on-screen display language.



WARNING (continued)

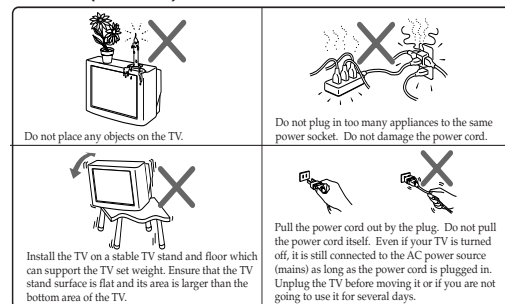


C Securing the TV

Not used for this model.

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

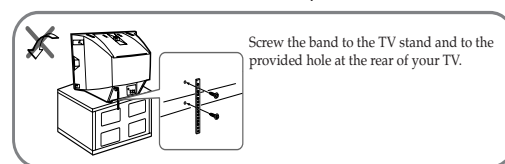

or

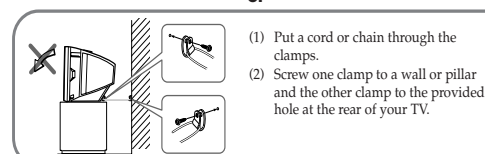


- Put a cord or chain through the clamps.
- Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

D TV front and rear panels

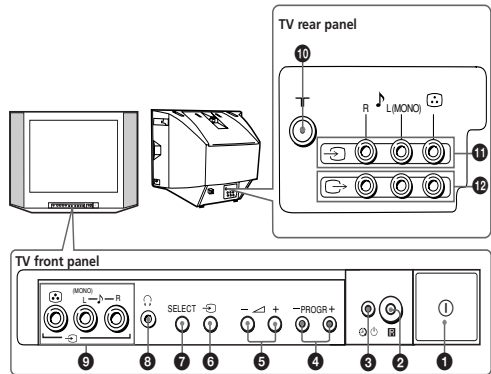

Button	Function
1 0	Turn off or turn on the TV.
2 R	Remote control sensor.
3	Standby indicator.
4	Wake Up indicator.
5 PROGR +/-	Select program number.
6 +/- *	Adjust volume.
7	Select TV or video input.
8 SELECT	Select the desired item.
9	Headphone terminal.
10 11	Video input terminal.
12	Antenna input terminal.
13	Monitor output terminal.

* You can also use the +/- buttons on the TV to work as the +/- buttons on the remote.


F Troubleshooting

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer.

Symptom	Solutions
Snowy picture, noisy sound	- Check the antenna cable and connection on the TV, VCR and on the wall. - Preset the channel manually again. (See J) - Check the antenna setup. Contact a Sony dealer for advice.
Good picture, noisy sound	Select the appropriate TV system. (Not used for this model.) (See J)
No picture, no sound	- Check the power cord, antenna and the VCR connections. - Press I/0 (power) or 0 (main power) to turn on the TV.
Good picture, no sound	- Press <+> to increase the volume level. - Press <M> to cancel the muting.
Dotted lines or stripes	- Do not use a hair dryer or other equipment near the TV. - Check the antenna setup. Contact a Sony dealer for advice.
Double images or "ghosts"	- Use the fine tuning ("FINE") function. (See J) - Turn off or disconnect the booster if it is in use. - Check the antenna setup. Contact a Sony dealer for advice.
No color	- Select the appropriate color system. (See J) - Adjust the color level. (See K) - Check the antenna setup. Contact a Sony dealer for advice.
Abnormal color patches	Keep external speakers or other electrical equipment away from the TV. Press 0 (main power) to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.
The 0 (standby) indicator on your TV flashes red several times after every three seconds	Count the number of times the 0 (standby) indicator flashes. Press 0 (main power) to turn off your TV. Contact your nearest Sony service center.
TV cabinet creaks.	Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.
A "boom" sound is heard when the TV is turned on.	The TV's demagnetizing function is working. This does not indicate a malfunction.

E Connecting optional components


Connecting to the video input terminal (7)

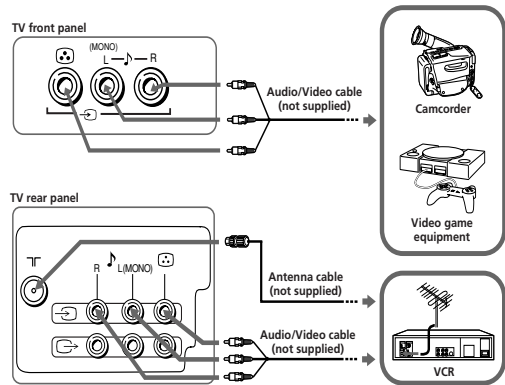

Note

- Do not connect video equipment to 7 (video input) at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

Connecting to the monitor output terminal (13)

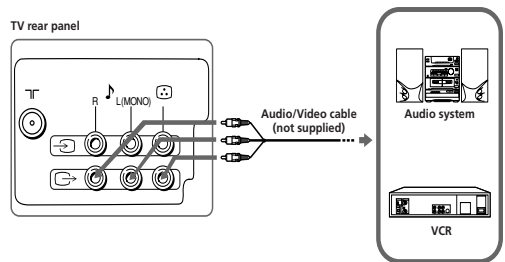

Presetting channels (continued)

To change the TV system setting (Not used for this model)

If the picture or sound is abnormal when receiving programs through the 12 (antenna input) terminal

- Press SELECT until "TV SYS" appears on the screen.
- Press + or - to select the appropriate TV system until the picture or sound quality is optimal.

B/G → I → D/K → M

To change the color system setting

If the color is abnormal when receiving programs through the 12 (antenna input) terminal or the 7 (video input) terminal

- Press SELECT until "COLOR SYS" appears on the screen.
- Press + or - to select the appropriate color system until the color is optimal.

AUTO → PAL → SECAM → NTSC3.58 → NTSC4.43

Note

- The color system "SECAM" is available for KV-HA14L80 only.

To skip program numbers

- Press PROGR +/- or the number buttons until the unused or unwanted program number appears on the screen.
- Press SELECT until "MANUAL PROGRAM" appears on the screen.
- Press + or - once to enter the "MANUAL PROGRAM" mode.
- Press PIC MODE to skip the unused or unwanted program number.
- Press SELECT to exit the "MANUAL PROGRAM" mode.

Note

- To restore the skipped program number again, preset the channel automatically or manually.

To use the fine tuning function


The fine tuning (FINE) function may help to reduce the following problems: double images and lines moving across the TV screen.

You can use the fine tuning function as below:

- Select the program number you want to adjust.
- Press SELECT until "MANUAL PROGRAM" appears on the screen.
- Press + or - once to enter the "MANUAL PROGRAM" mode.
- Press 0 to display "FINE" on the screen.
- Press + or - continuously until the above problems are minimized. The + or - icon on the screen flashes while tuning.
- Press SELECT to exit the "MANUAL PROGRAM" mode.


I Setting the timers

You can turn on and off your TV by using the  and  buttons respectively.

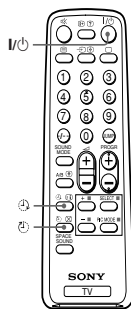

Setting the Wake Up timer

- 1 Press  until the desired period of time appears on the screen.



The Wake Up timer starts immediately after you have set it.


- 2 Select the program number or video input you want to wake up to.

- 3 Press , or set the Sleep timer if you want the TV to turn off automatically.

The  indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press  until the desired period of time appears on the screen.



The Sleep timer starts immediately after you have set it.


Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

K Customizing the picture and sound

You can customize the picture and sound by selecting the picture and sound modes or by adjusting its settings.

You can change the sound effect by selecting the space sound mode.

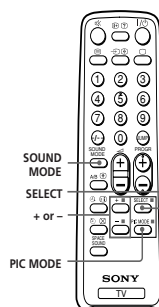

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
"DYNAMIC"	view high contrast pictures.
"STANDARD"	view normal contrast pictures.
"SOFT"	view mild pictures.

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
"DYNAMIC"	listen to dynamic and clear sound that emphasizes the low and high sound.
"DRAMA"	listen to sound that emphasizes vocals and background music.
"SOFT"	listen to soft sound.

Adjusting the picture and sound settings

- 1 Press SELECT until the desired setting appears.
Each time you press SELECT, the setting item will change as follows:




- 2 Press + or - to adjust the item.
- 3 To adjust other items, repeat steps 1 to 2.

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing "SHARP" can also reduce picture noise.

J Presetting channels

You can automatically preset up to 100 TV channels in numerical sequence from program number 1, or manually preset desired channels and channels that cannot be preset automatically.

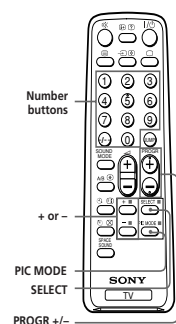

Presetting channels automatically from a specified program number

- 1 Press SELECT until "AUTO PROGRAM" appears on the screen.

- 2 Press + or - once to enter the "AUTO PROGRAM" mode.
The on-screen display will start flashing.

- 3 Press PROGR +/- or the number buttons until the desired program number appears on the screen.

- 4 Press + or - to start presetting channels automatically.

Presetting channels manually

- 1 Press SELECT until "MANUAL PROGRAM" appears on the screen.

- 2 Press + or - once to enter the "MANUAL PROGRAM" mode.

- 3 Press PROGR +/- or the number buttons until the desired program number appears on the screen.

- 4 Press + or - until the desired channel picture appears on the screen.

- 5 To preset other channels manually, repeat steps 3 to 4.

Presetting channels (continued)

To change the TV system setting (Not used for this model)

If the picture or sound is abnormal when receiving programs through the  (antenna input) terminal

- (1) Press SELECT until "TV SYS" appears on the screen.
- (2) Press + or - to select the appropriate TV system until the picture or sound quality is optimal.

B/G -> I -> D/K -> M

To change the color system setting

If the color is abnormal when receiving programs through the  (antenna input) terminal or the  (video input) terminal

- (1) Press SELECT until "COLOR SYS" appears on the screen.
- (2) Press + or - to select the appropriate color system until the color is optimal.

AUTO -> PAL -> SECAM -> NTSC3.58 -> NTSC4.43

Note

- The color system "SECAM" is available for KV-HA21M50 only.

To skip program numbers

- (1) Press PROGR +/- or the number buttons until the unused or unwanted program number appears on the screen.
- (2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
- (3) Press + or - once to enter the "MANUAL PROGRAM" mode.
- (4) Press PIC MODE to skip the unused or unwanted program number.
- (5) Press SELECT to exit the "MANUAL PROGRAM" mode.

Note

- To restore the skipped program number again, preset the channel automatically or manually.

To use the fine tuning function

The fine tuning (FINE) function may help to reduce the following problems: double images and lines moving across the TV screen.

You can use the fine tuning function as below:

- (1) Select the program number you want to adjust.
- (2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
- (3) Press + or - once to enter the "MANUAL PROGRAM" mode.
- (4) Press  to display "FINE" on the screen.
- (5) Press + or - continuously until the above problems are minimized.
The + or - icon on the screen flashes while tuning.
- (6) Press SELECT to exit the "MANUAL PROGRAM" mode.

Customizing the picture and sound (continued)

Selecting the space sound mode

Press SPACE SOUND.

Select	To
"ON"	listen to monaural sound with a stereo-like effect.
"OFF"	turn off space sound mode.

Note

- You can also turn space sound on or off using the SELECT and + or – buttons.

Adjusting the picture position

► Not used for this model.


If the picture is slanting, you can adjust the picture position using the "PIC ROTATION" function until it is optimal.

Slanting



Optimal





1

Press SELECT repeatedly until "PIC ROTATION" appears on the screen.

2

Press + or – to adjust the picture position.

The  or  icon on the screen flashes while adjusting.


Note

- To reduce the slanting picture, keep external speakers or other electrical equipment away from the TV.


– 10 –

SECTION 2 DISASSEMBLY


2-1. REAR COVER REMOVAL

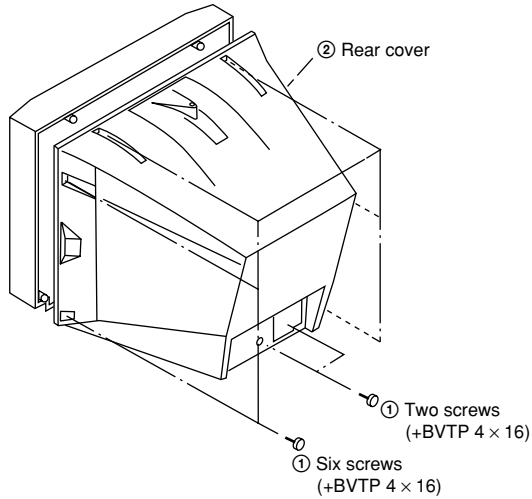


2-2. SPEAKER REMOVAL

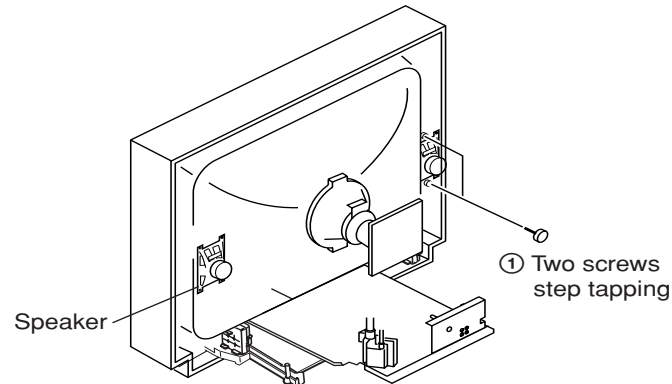


2-3. CHASSIS ASSY REMOVAL

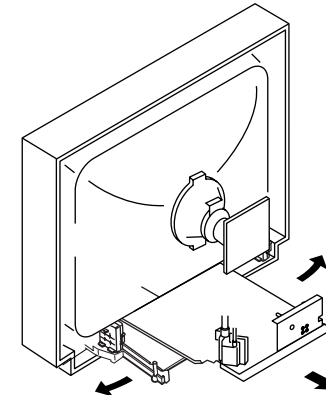

2-4. SERVICE POSITION

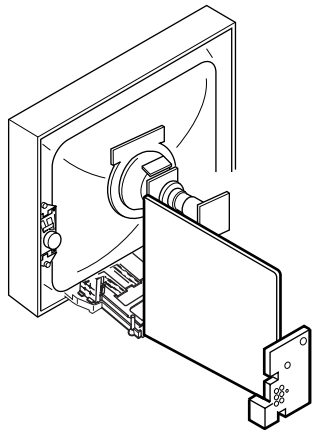


2-5. TERMINAL BRACKET REMOVAL

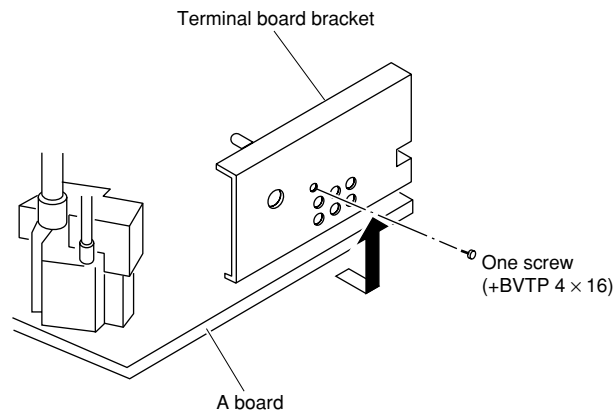


2-6. REPLACEMENT OF PARTS

For replacements of light guide, unscrew them, exchange with new parts and fix them with screws respectively.

2-6-1. Replacement of Light Guide

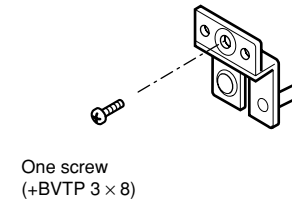


2-6-2. Replacement of Power Button

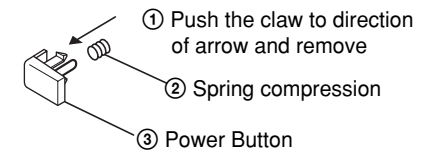

Caution: Do not take out CRT support block while TV set in standing position.

Note: Undress necessary wires that creates tension while placing the chassis into Service Position.


2-7. DEGAUSS COIL REMOVAL

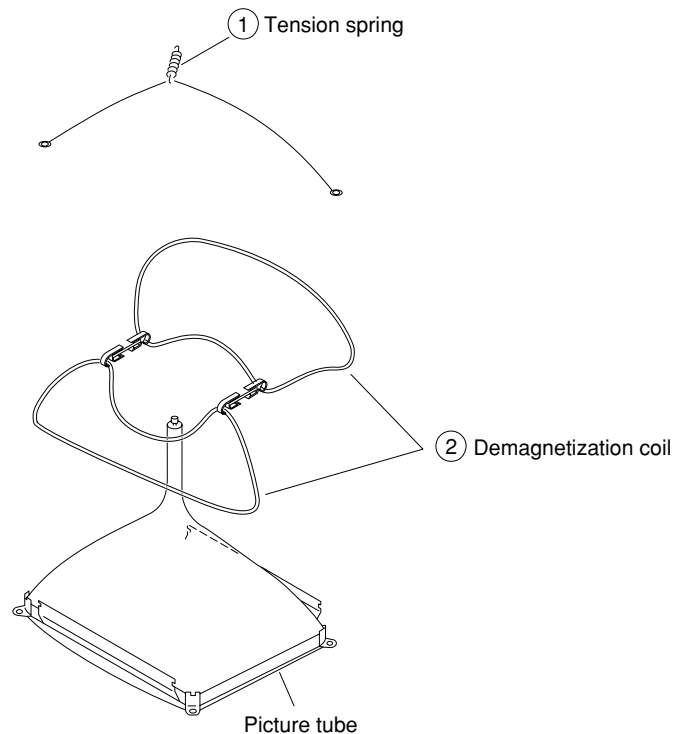

2-8. PICTURE TUBE REMOVAL

Note:


- Please make sure the TV set is not in standing position before removing necessary CRT support located on bottom right and left.

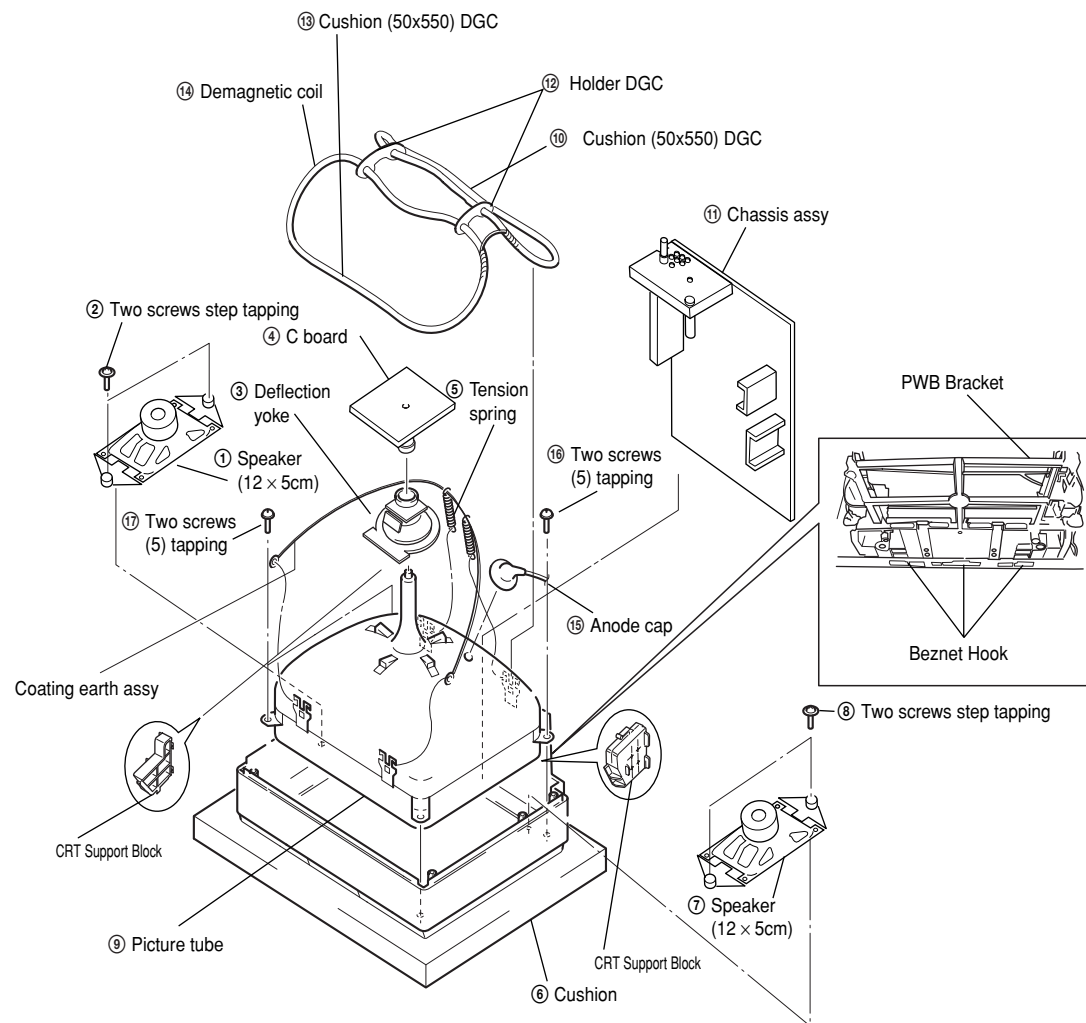


•REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.


•REMOVING PROCEDURES

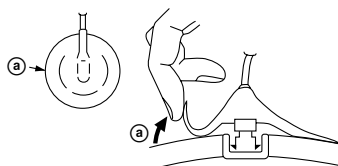

- ① Turn up one side of the rubber cap in the direction indicated by the arrow (a).

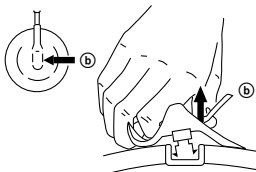


- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow (b).

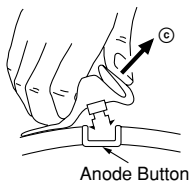

- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow (c).

• HOW TO HANDLE AN ANODE-CAP

- ① Do not damage the surface of anode-caps with sharp shaped objects.
- ② Do not press the rubber too hard so as not to damage the inside of anode-cap. A metal fitting called the shatter-hook terminal is built into the rubber.
- ③ Do not turn the foot of rubber over too hard. The shatter-hook terminal will stick out or damage the rubber.

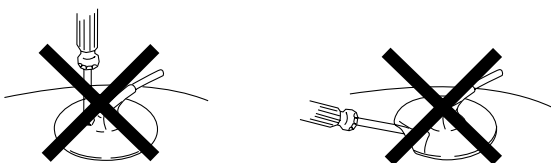

SECTION 3
SET-UP ADJUSTMENTS

The following adjustments should be made when a complete realignment is required or a new picture tube is installed.

These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:

PICTURE control normal

BRIGHTNESS control normal

Perform the adjustments in the following order :

- 1. Beam Landing
- 2. Convergence
- 3. Focus
- 4. White Balance

Note : Test Equipment Required.

- 1. Pattern Generator
- 2. Degausser
- 3. Oscilloscope

Preparation :

In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.

Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

- 1. Input a white signal with the pattern generator.
Contrast } normal
Brightness }
- 2. Set the pattern generator raster signal to a green raster.
- 3. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side.
(See Figures 3-1 through 3-4.)
- 4. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 3-1.)
- 5. Switch the raster signal to blue, then to red and verify the condition.
- 6. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
- 7. If the beam does not land correctly in all the corners, use a magnet to adjust it.
(See Figure 3-4.)

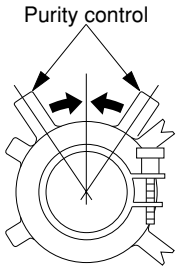


Fig. 3-2

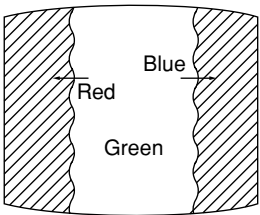


Fig. 3-3

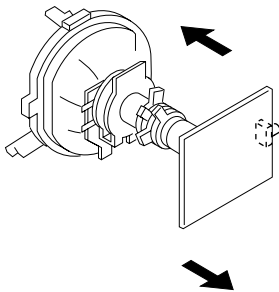


Fig. 3-1

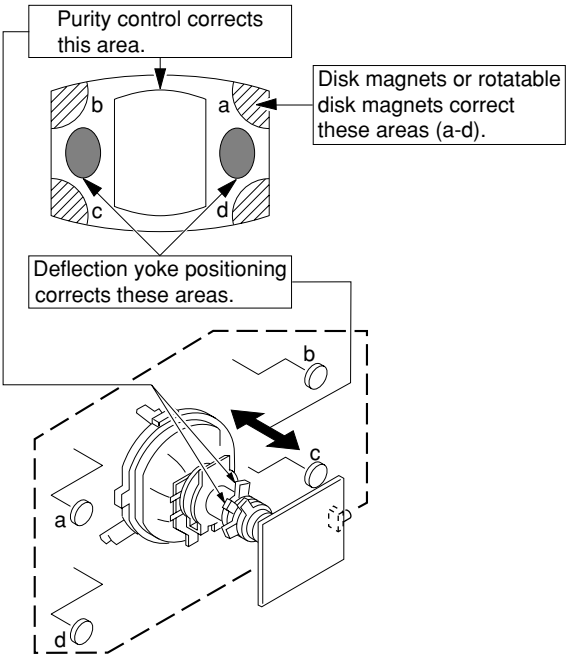



Fig. 3-4

3-2. CONVERGENCE


Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive dot/hatch signal.
- Pic mode: Soft.


(1) Horizontal and Vertical Static Convergence

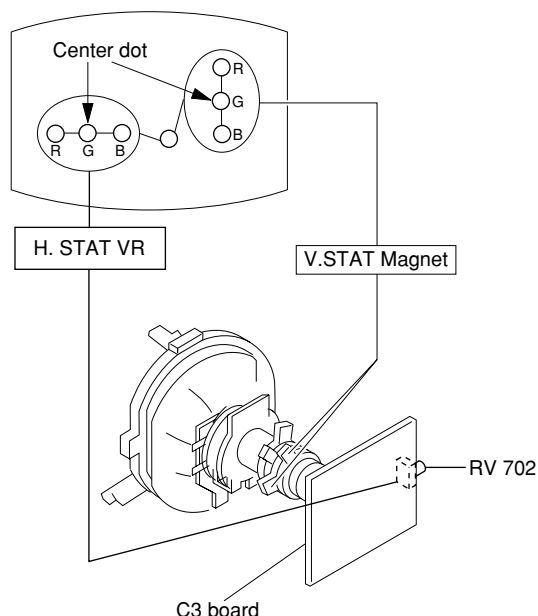

1. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving horizontally), adjust the H.STAT VR control so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
(In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

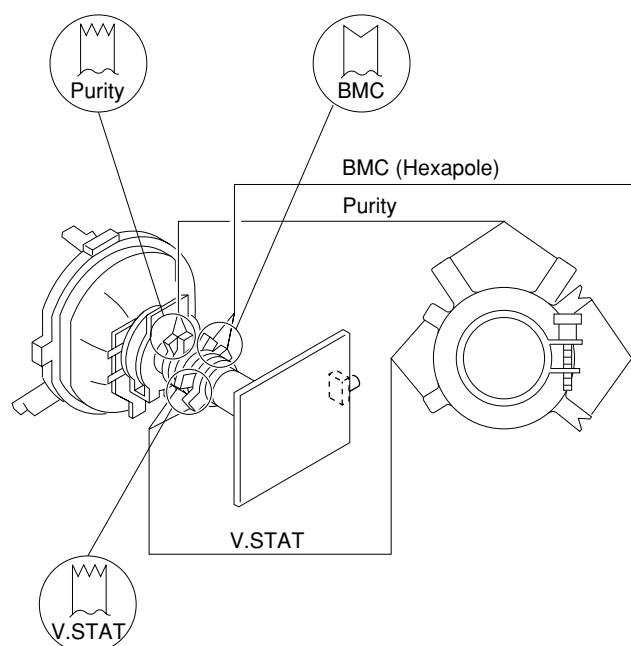


- Operation of V. Stat magnet
If the V. Stat magnet is moved in the "a" and "b" arrows, the red, green and blue dots move as shown below.

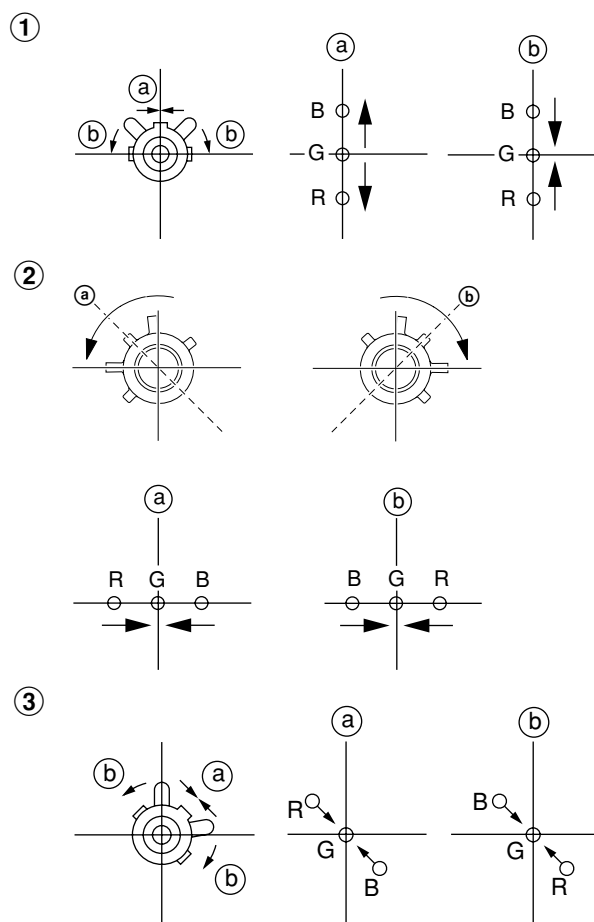

④ BMC (Hexapole) Magnet.


If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

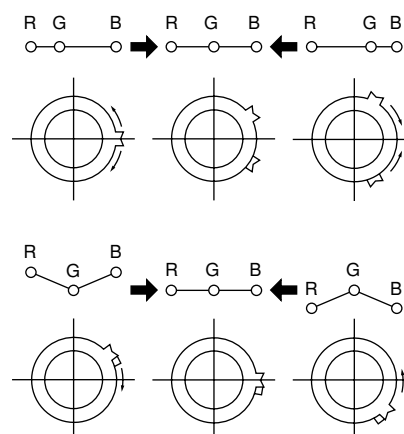

(2) Dynamic Convergence Adjustment


Preparation:

Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence


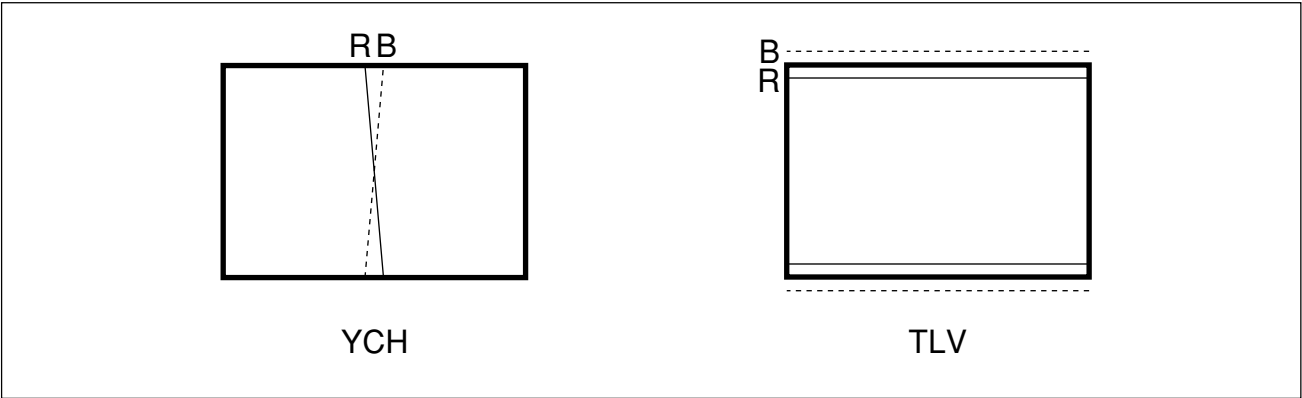


- | | | | |
|-----|--------|-----|---|
| TLH | Insert | TLH | Correction Plate to DY Pocket (Left or Right) |
| YCH | Rotate | YCH | VOL on DY |
| TLV | Rotate | TLV | VOL ON DY |
| XCV | Rotate | XCV | Adj core on DY |

ON DY:

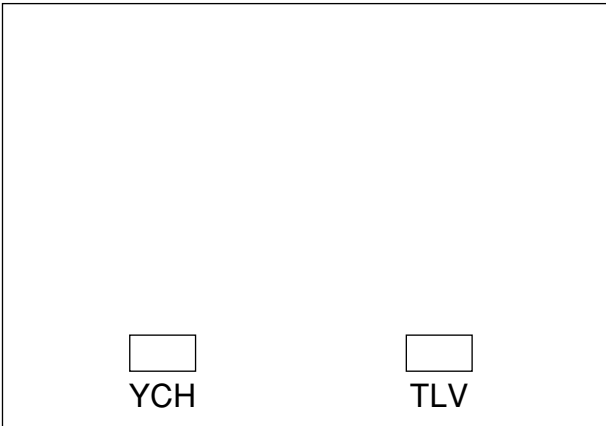


(3) Screen-corner Convergence

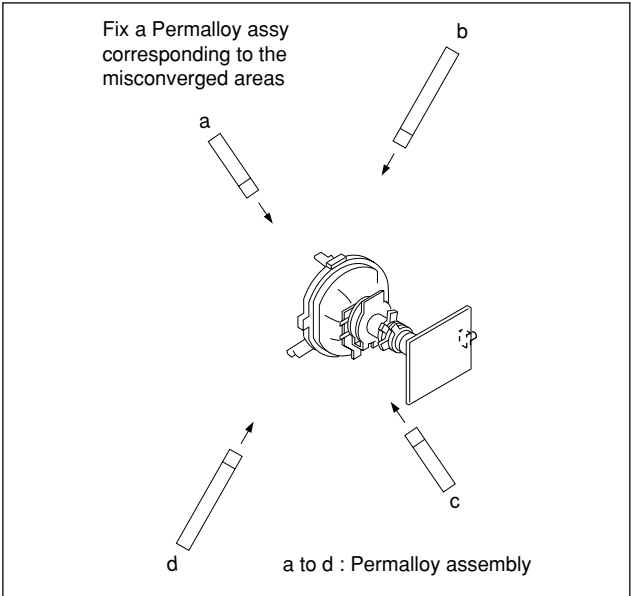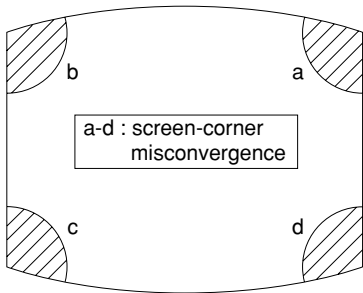

3-3. FOCUS ADJUSTMENT

FOCUS adjustment should be completed before W/B adjustment.


1. Receive digital monoscope pattern.
2. Set "Picture Mode" to "DYNAMIC".
3. Adjust focus VR so that the center of screen becomes just focus.
4. Change the receiving signal to white pattern and blue back.
5. Confirm magenta ring is not noticeable. In case magenta is very obvious, adjust focus VR to take balance of magenta ring and focus.

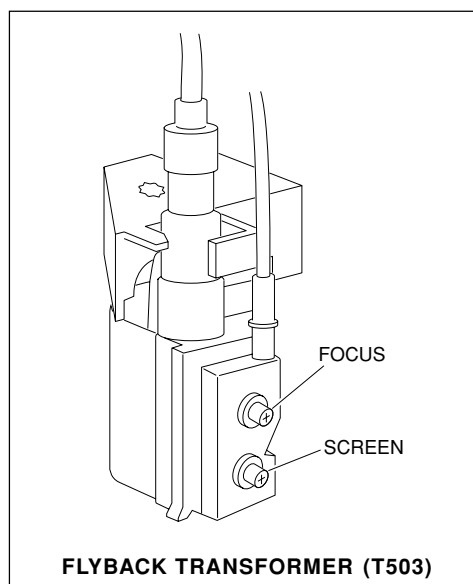

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

- 1) Set the PICTURE to normal.
- 2) Put to VIDEO input mode without signals.
- 3) Connect R, G and B of the C board cathode to the oscilloscope.
- 4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
- 5) Adjust G2 (screen) on the FBT until picture shows the point before cut off.

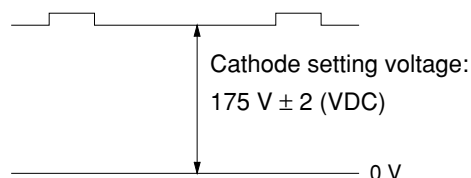


2.a) WHITE BALANCE ADJUSTMENT

- 1) Set to Service Mode (Refer Section 4-1: ADJUSTMENTS WITH COMMANDER).
- 2) Input white raster signal.
- 3) Set 49 (ABL) and IF (VP2) service mode to 00.
- 4) Set Picture to DYNAMIC.
- 5) Select OB (RDR) with [1] and [4], and set the level to 25 with [3] and [6] for best white balance.
- 6) Select OC 'GDR' and OD 'BDR' with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
- 7) Write into the memory by pressing [MUTING] then [0].
- 8) Set back 49 'ABL' and IF 'VP2' service mode to original data.

2.b) SUB BRIGHT ADJUSTMENT

- 1) Set to service mode.
- 2) Set 49 (ABL) and IF (VP2) service mode to 00
- 3) Input a staircase signal of black to white from the pattern generator.
- 4) BRIGHTNESS 50%.
PICTURE MINIMUM
- 5) Select OE 'SBR' with [1] and [4], and adjust OE 'SBR' level with [3] and [6] so that the second stripe from the right is dimly lit.
- 6) Write into the memory by pressing [MUTING] then [0].
- 7) Set back 49 (ABL) and IF (VP2) service mode to original data.

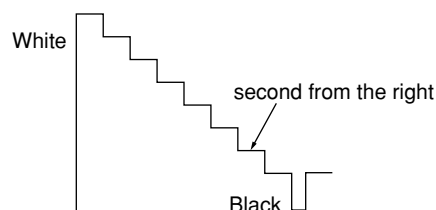


SECTION 4 CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENT WITH COMMANDER

Service adjustments to this model can be performed using the supplied Remote Commander RM-969


a. ENTERING SERVICE MODE

With the unit on standby



This operation sequence puts the unit into service mode.

The screen display is :

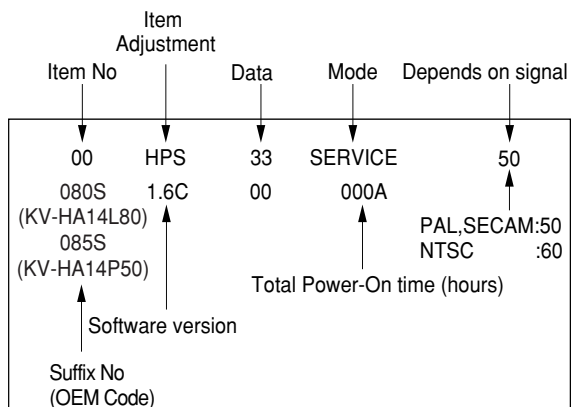

b. METHOD OF CANCELLATION FROM SERVICE MODE


Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

- 1) Set to Service Mode.
- 2) Press [1] (UP) and [4] (DOWN), to select the adjustment.
- 4) Press [MUTING] button to indicate WRITE on the screen.
- 5) Press [0] button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

- 1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
- 2) Turn the power switch ON and set to Service Mode.
- 3) Call the adjusted items again to confirm adjustments were made.

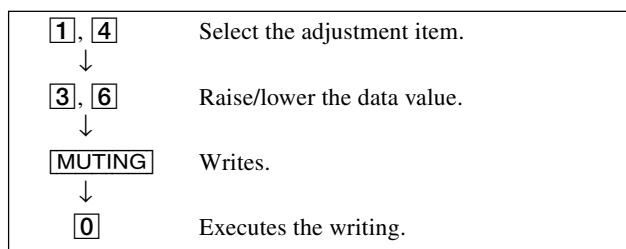

e. OTHER FUNCTION VIA REMOTE COMMANDER

- | | |
|-------------|---|
| [7], [0] | All the data becomes the values in memory. |
| [8], [0] | All user control goes to the standard state. |
| [5], [0] | Service data initialization (Be sure not to use usually.) |
| [2], [0] | Copy and write all data. |
| [MUTE], [0] | Write 50Hz adjustment data to 60Hz or vice versa. |


4-2. ADJUSTMENT METHOD

Item Number 00 HPS

This explanation uses H Shift as an example.

1. Select "00 HPS" with the [1] and [4] buttons.
2. Raise/lower the data with the [3] and [6] buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Write with the [MUTING] button. (The display changes to WRITE.)
5. Execute the writing with the [0] button. (The WRITE display will be changed to red color while excuting, and back to SERVICE.)

Example on screen display :-

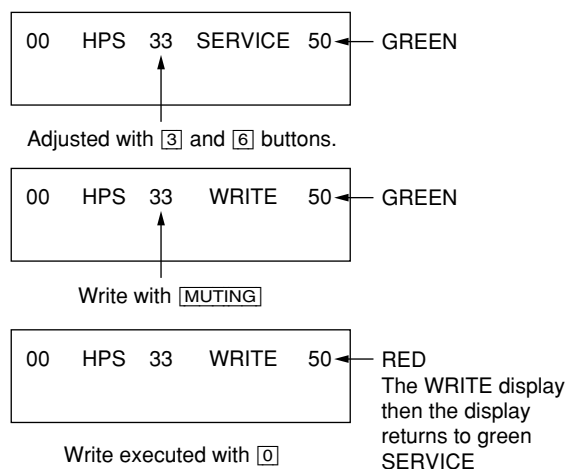

Use the same method for all Items. Use [1] and [4] to select the adjustment item, use [3] and [6] to adjust, write with [MUTING], then execute the write with [0].

- Note :**
1. In [WRITE], the data for all items are written into memory together.
 2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table

Functionality		Initial	Range	Function	Table & Note	Register No. (Bit Range)	Device Name (Slave Address)
No.	Name						
00	HPS	2A	3F	H Shift	50/60Hz	03 (5 - 0)	TDA8843 / 44 (8A)
01	HSZ	1F	3F	H Size	50/60Hz	04 (5 - 0)	
02	PAP	1F	3F	Pin Amplitude	50/60Hz	05 (5 - 0)	
03	CPN	1F	3F	Corner Pin	50/60Hz	06 (5 - 0)	
04	TLT	1F	3F	Tilt	50/60Hz	07 (5 - 0)	
05	VSL	26	3F	V Slope	50/60Hz	08 (5 - 0)	
06	VAP	0F	3F	V Amplitude	50/60Hz	09 (5 - 0)	
07	SCO	0F	3F	S Correction	50/60Hz	0A (5 - 0)	
08	VPS	1F	3F	V Shift	50/60Hz	0B (5 - 0)	
09	VZM	19	3F	Vertical Zoom		16 (5 - 0)	
0A	VSC	1F	3F	Vertical Scroll	50/60Hz	17 (5 - 0)	
0B	RDR	1F	3F	R Drive	DYNAMIC/Others	0C (5 - 0)	
0C	GDR	25	3F	G Drive	DYNAMIC/Others	0D (5 - 0)	
0D	BDR	25	3F	B Drive	DYNAMIC/Others	0E (5 - 0)	
0E	SBR	58	7F	Sub Brightness		10 (5 - 0)	
0F	PMX	20	3F	Picture Maximum Data	TV/Video/Teletext	12 (5 - 0)	
10	PMI	04	3F	Picture Maximum Data		12 (5 - 0)	
11	SHU	07	0F	Sub Hue	TV/Video	02 (5 - 0)	
12	SSH	01	03	Sub Sharpness	TV/Video	0F (5 - 0)	
13	SC1	20	3F	Sub Color Lower	50/60Hz	11 (5 - 0)	
14	SC2	08	3F	Sub Color Higher	50/60Hz	11 (5 - 0)	
15	FO	00	03	01 Time Constant	TV/Video/Teletext	00 (3 - 2)	
16	AGT	00	3F	AGC Take Over	TV/Video/Teletext	13 (5 - 0)	
17	VSW	00	01	Video Mute Switch	TV/Video/Teletext	13 (6)	
18	FOR	03	03	Forced Field Frequency		01 (7 - 6)	
19	DL	00	01	De-interlace		01 (5)	
1A	POC	00	01	Fixed 01 Synchro. Mode		01 (3)	
1B	COR	01	01	Noise Coring	TV/Video/Teletext	10 (6)	
1C	RBL	00	01	RGB Blanking	TV/Video/Teletext	10 (7)	
1D	YDL	0A	0F	Y-Delay	PAL/NTSC/SECAM	1A (7 - 4)	
1E	VP1	00	FF	Extra Bits (see below)			
1F	VP2	01	FF	Extra Bits (see below)			
20	VP3	0F	FF	Extra Bits (see below)			
21	WST	15	FF	W/G Stereo Threshold			MSP3417G (80)
22	WBT	EC	FF	W/G Bilingual Threshold			
23	WLL	05	FF	W/G Monaural Threshold			
24	WAC	01	0F	W/G Agreement count			
25	WDL	30	FF	W/G Search Delay			
26	NDL	20	FF	NICAM Search Delay			
27	SDL	10	FF	Stereo Status Read Delay			
28	AGC	01	01	AGC Switch auto/constant		BB (7)	
29	REL	28	3F	AGC Gain at Constant Mode		BB (6 - 1)	
2A	CRM	00	01	Carrier Muting on/off		BB (9)	
2B	ACO	01	01	Audio Clock-out on/off		83 (5)	
2C	FP	1B	7F	FM Prescale for B / G, I, D / K		0E (7 - 0)	
2D	FPM	32	7F	FM Prescale for M		0E (7 - 0)	
2E	FH	36	7F	FM Prescale for HDEV (non-M)		0E (7 - 0)	
2F	FHM	65	7F	FM Prescale for HDEV (M)		0E (7 - 0)	

Adjustment Item Table

Functionality		Initial	Range	Function	Table & Note	Register No. (Bit Range)	Device Name (Slave Address)
No.	Name						
30	WGP	1C	7F	W/G Prescale		0E (7 - 0)	MSP3417G (80)
31	NIP	7F	7F	Nicam Prescale		10 (7 - 0)	
32	ERR	50	FF	Auto FM Switch Threshold		21 (10 - 3)	
33	VOL	6D	7F	DFP Volume Maximum		00 (14 - 8)	
34	ING	00	0F	Input Gain	M System /non-M/Video	01 (3 - 0)	TDA7438 (88)
35	VOM	00	3F	Volume Output Gain	M System only	02 (5 - 0)	
36	BCS	01	03	Bass Center Shift			
37	TCS	02	03	Treble Center Shift			
38	TXH	2A	FF	Horizontal Display Position			SAA5264 (58)
39	TXV	27	3F	Vertical Display Position (line offset from V-sync)			
3A	THD	00	7F	H-sync Active Edge Shift			
3B	TVD	3F	7F	V-sync Active Edge Shift			
3C	HPL	01	01	H-sync Polarity Configuration	00:Positive, 01:Negative		
3D	VPL	01	01	V-sync Polarity Configuration	00:Positive, 01:Negative		
3E	FPL	01	01	Field Polarity Configuration	00:V-syn second half line, 01:V-sync first half line		
3F	FMD	00	03	Force Mode	00:Auto, 01:Default, 02:Fastext, 03:Top mode		
40	TBR	08	0F	Set Teletext RGB Brightness			
41	NOP	01	0F	National Option Table Configuration			
42	TCH	01	03	Twisted Character Set Configuration			
43	BKP	00	3F	Picture Data at Blanking OFF			Other Control
44	ODL	10	FF	Power ON Delay			
45	OSH	0A	3F	OSD H Position			
46	TSY	00	03	TV System at Auto Preset	00:B/G, 01:I, 02:D/K, 03:M		
47	DKS	01	01	D/K Stereo enable/disable			
48	MUT	00	01	Muting on/off at No Sync			
49	ABL	01	01	Bright ABL Switch			
4A	SCM	01	01	SECAM Trap active/inctive			
4B	SLS	01	01	Activate SL. OR. IFI Sync			
4C	SSV	02	07	Space Sound Volume Step Up			
4D	VPW	35	7F	Timer of Video Processor start up wait			
4E	OP1	2F	FF	Optional Flags 0 (see below)			
4F	OP2	0F	FF	Optional Flags 1 (see below)			
50	OP3	00	FF	Optional Flags 2 (see below)			

NOTE:

■ Shaded item:— init. are fixed data

- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory.
In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

No. 1E VP1

BCO	Switch-on behaviour 1=Switch -on of picture via internal delay 0=Without delay	00(4)
OSO	1=Switch off in vertical overscan 0=Switch-off undefind	18(7)
SBL	Service blanking 1= on 0= off	0B(7)
HBL	RGB Blanking Mode 1 = wide blanking, 0 = normal blanking	02(7)
FCO	Forced Color-on 1=no colour killer 0=normal colour killer function	1B(0)
FFI	Fast filler IF-PLL 1=increased time constant 0=normal time constant	1A(1)

MAT	PAL-SECAM-/NTSC Matrix 1 =PAL matrix, 0=adapted to standard	0E(7)
DS	Dynamic skin control on/off 1= on 0= off	1A(3)
DSA	Dynamic skin control angle 1=correction angle 117 degrees 0=correction angle 123 degrees	1A(2)
EBS	Extended Blue Stretch 1= on 0= off	1A(0)
BLS	Blue stretch 1= on 0= off	18(4)
BKS	Black stretch 1= on 0= off	18(3)

BB	Blue back when no video signal is identified 1= on 0= off	18(0)
AKB	Black current stabilisation 1=not active 0=active	02(6)
BPS	Bypass of chroma base-band delay line 1=bypassed 0=active	19(6)
CB	Chroma bandpass centre frequency 1= 1.1x Fsc 0=Fsc	18(5)
ACL	Automatic colour limiting 1= active 0= not active	19(5)

Other optional function will be enabled if the corresponding bit is set to 1.

No. 4F OP2

Item	No NICAM	US ST	HDEV	IV-Curve	XTAL SEL		SECAM	2nd Lang.
KV-HA14L80	0	0	0	0	1	1	1	1
KV-HA14P50	0	0	0	0	1	1	1	1

No NICAM

US ST

1 V-Curve

(for monaural model)

XTAL SEL

1 = NICAM search is disable in any TV system, 0 = NICAM search operates
(Reserved for NTSC model)1 = using common volume curve for every mode and every TV system
0 = another volume curve available for video mode and M system

00 = only 4.43 XTAL

10 = not used

01 = only 3.58 XTAL

11 = both 4.43 and 3.58 XTAL

Other optional function will be enabled if the corresponding bit is set to 1.

No. 50 OP3

Item	Pict Rot.	Auto TV Sys.	No Bal.	SPC SOUND	Korean ST	VM	H.K. Bil.	Thai Bil.
KV-HA14L80	0	0	0	0	0	0	0	0
KV-HA14P50	0	0	0	0	0	0	0	0

No Bal.

(for AV stereo model)

SPC SOUND

Korean ST

H.K. Bil.

(for monaural model)

1 = no balance in analog select items, 0 = balance included

1 = Space Sound available, 0 = not available

(Reserved for NTSC model)

1 = NICAM bilingual available (No NICAM stereo), 0 = not available

Other optional function will be enable if the corresponding bit is set to 1.

OPERATION GUIDE

SERVICE MODE

How to set up new NVM (or initialize already written one)

- (1) AC ON
- (2) Enter Service Mode - describing below how to enter
- (3) Push the commander button “5” and “0” sequentially (only set initial data into RAM, but not write them into NVM yet)
- (4) Push the commander button “2” and “0” sequentially (copy the data into all NVM area - all wide modes and 50/60Hz respectively)
- (5) Push the commander button “8” and “0” sequentially (initialize user data, select program 1 and exit Service Mode)
- (6) Select TV system and execute Auto Preset

How to enter Service Mode

- At power ON, push the commander button “test” and “TV ON” sequentially
- At stand-by, push the commander button “display”, “5”, “vol +” and “power” sequentially

How to exit Service Mode

- Push the commander button “other ON” or power (AC) OFF

How to increment/decrement items and data

- Items : push the commander button “1” / “4”
- Data : push the commander button “3” / “6” (not write into NVM)

Other operations

- Write data into NVM - push the commander button “mute” and “0” sequentially
- Read data from NVM - push the commander button “7” and “0” sequentially
- Copy 50Hz data into 60Hz area - push the commander button “display” and “0” sequentially

SELF DIAGNOSIS MODE

How to enter Self Diagnosis Mode

- At stand-by, push the commander button “display”, “5”, “vol-” and “power” sequentially

How to exit Self Diagnosis Mode

- Push the commander button “other ON” or power (AC) OFF

Other operations

- Clear data and Write into NVM - push the commander button “8” and “0” sequentially

HOTEL TV MODE

How to enter Hotel TV Mode ON stage

- At stand-by, push the commander button “display”, “MUTE”, “vol +” and “power” sequentially
- The Hotel TV setup display, where the maximum level of the volume can be applied (=35 or above)
- Write data into NVM - push the commander button “mute” and “0” sequentially

How to enter Hotel TV Mode OFF stage

- At stand-by, push the commander button “display”, “MUTE”, “vol -” and “power” sequentially
- Write data into NVM - push the commander button “mute” and “0” sequentially

Modification Note


The item including the new addition is yellow.

1. The flag was added to bit 7 of OP1. This is the flag which chooses the volume curve used by HA (ME) model. (V2. IC)

4-3. PICTURE QUALITY ADJUSTMENT

SUB COLOR ADJUSTMENT


1. Select Video.
2. Input a PAL color-bar.
3. Set to the following condition:
PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN300, A board.
5. Set to Service Mode and select 13 'SC1' with [1] and [4] of the commander then adjust to VB2=VB3=VB4 with [3] and [6].
6. Press [MUTING] → [0] of the commander to write the data.
7. Adjust 13 'SC1' as step 2 to 5 when receiving NTSC color-bar.

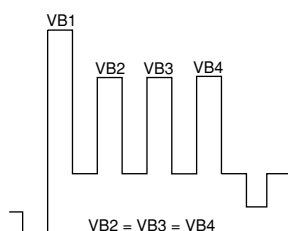

VB2 = VB3 = VB4 (Difference is within 70mV)

SUB HUE ADJUSTMENT

1. Select Video.
2. Input a NTSC 3.58, color-bar into Video/TV mode.
3. Set the following condition:
PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN300, A board.
5. Select 11 "SHU" with [1] and [4] of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with [3] and [6].

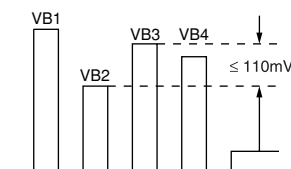

VB1 = VB2 = VB3 = VB4

The highest level of VB1,VB2,VB3,VB4 must be aligned at the same line. Ideal difference level between VB2 and VB3 should be within $\pm 110\text{mV}$.

6. Press [MUTING] → [0] of the commander to write the data.
7. Select TV channel with NTSC 3.58 and repeat 3 to 5.
8. Press [MUTING] → [0] of the commander to write the data.
9. Single system model with NTSC 4.43, select TV channel with NTSC 4.43 and repeat 3 to 5.

4-4. DEFLECTION ADJUSTMENT

NORMAL MODE (50Hz)

1. Set to Service mode.
2. Input PAL color bar.
3. Using the [1] and [4] button, select category GEO (Service Mode).
4. Raise/lower the data using the [3] and [6] buttons.
Select and adjust the following items to obtain optimum image.

Service Item

GEO : 00	HPS	H POSITION
01	HSZ	H SIZE
02	PAP	PIN AMPLITUDE
03	CPN	CORNER PIN
04	TLT	TILT
05	VSL	V SLOPE
06	VAP	VERTICAL AMPLITUDE
07	SCO	S CORRECTION
08	VPS	V SHIFT

NORMAL MODE (60Hz)

5. Input 525/60Hz signal.
6. Using the [1] and [4] buttons select category GEO (Service Mode).
7. Select and adjust the following items to obtain optimum image.

Raise/lower the data with the [3] and [6] buttons.

Service Item


GEO : 00	HPS	H POSITION
01	HSZ	H SIZE
02	PAP	PIN AMPLITUDE
03	CPN	CORNER PIN
04	TLT	TILT
05	VSL	V SLOPE
06	VAP	VERTICAL AMPLITUDE
07	SCO	S CORRECTION
08	VPS	V SHIFT

4-5. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.
2. Press commander buttons [5] and [0] (Data Initialize), and [2] and [0] (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
In cases where items are not well adjusted, rectify the fine adjustment.
Write the data per each item number ([MUTING] + [0]).
4. Select item numbers 4E 'OP0', 4F 'OP1', 50 'OP2' and respectively set the bit per model with command buttons [3] and [6].
5. Press commander buttons [8] and [0] (Test Normal) to return to the data that was set on the shipment from the factory.
(This will also cancel Service Mode.)


4-6. PICTURE DISTORTION ADJUSTMENT

Item Number 00 – 08

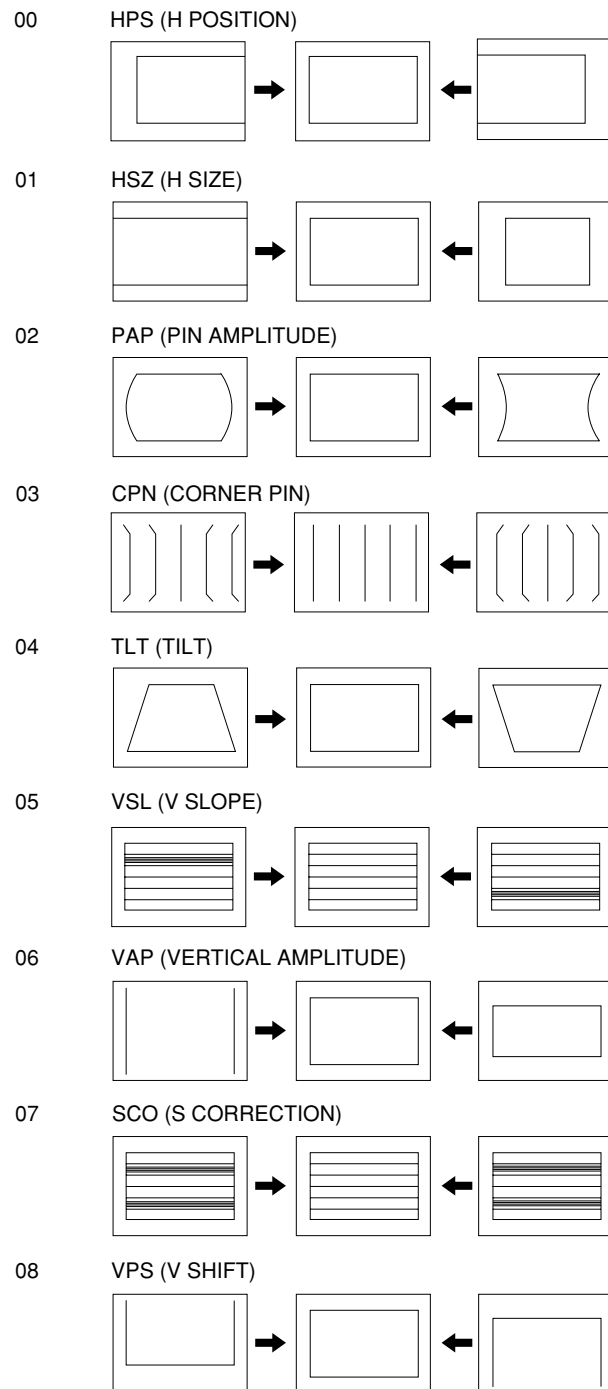


SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

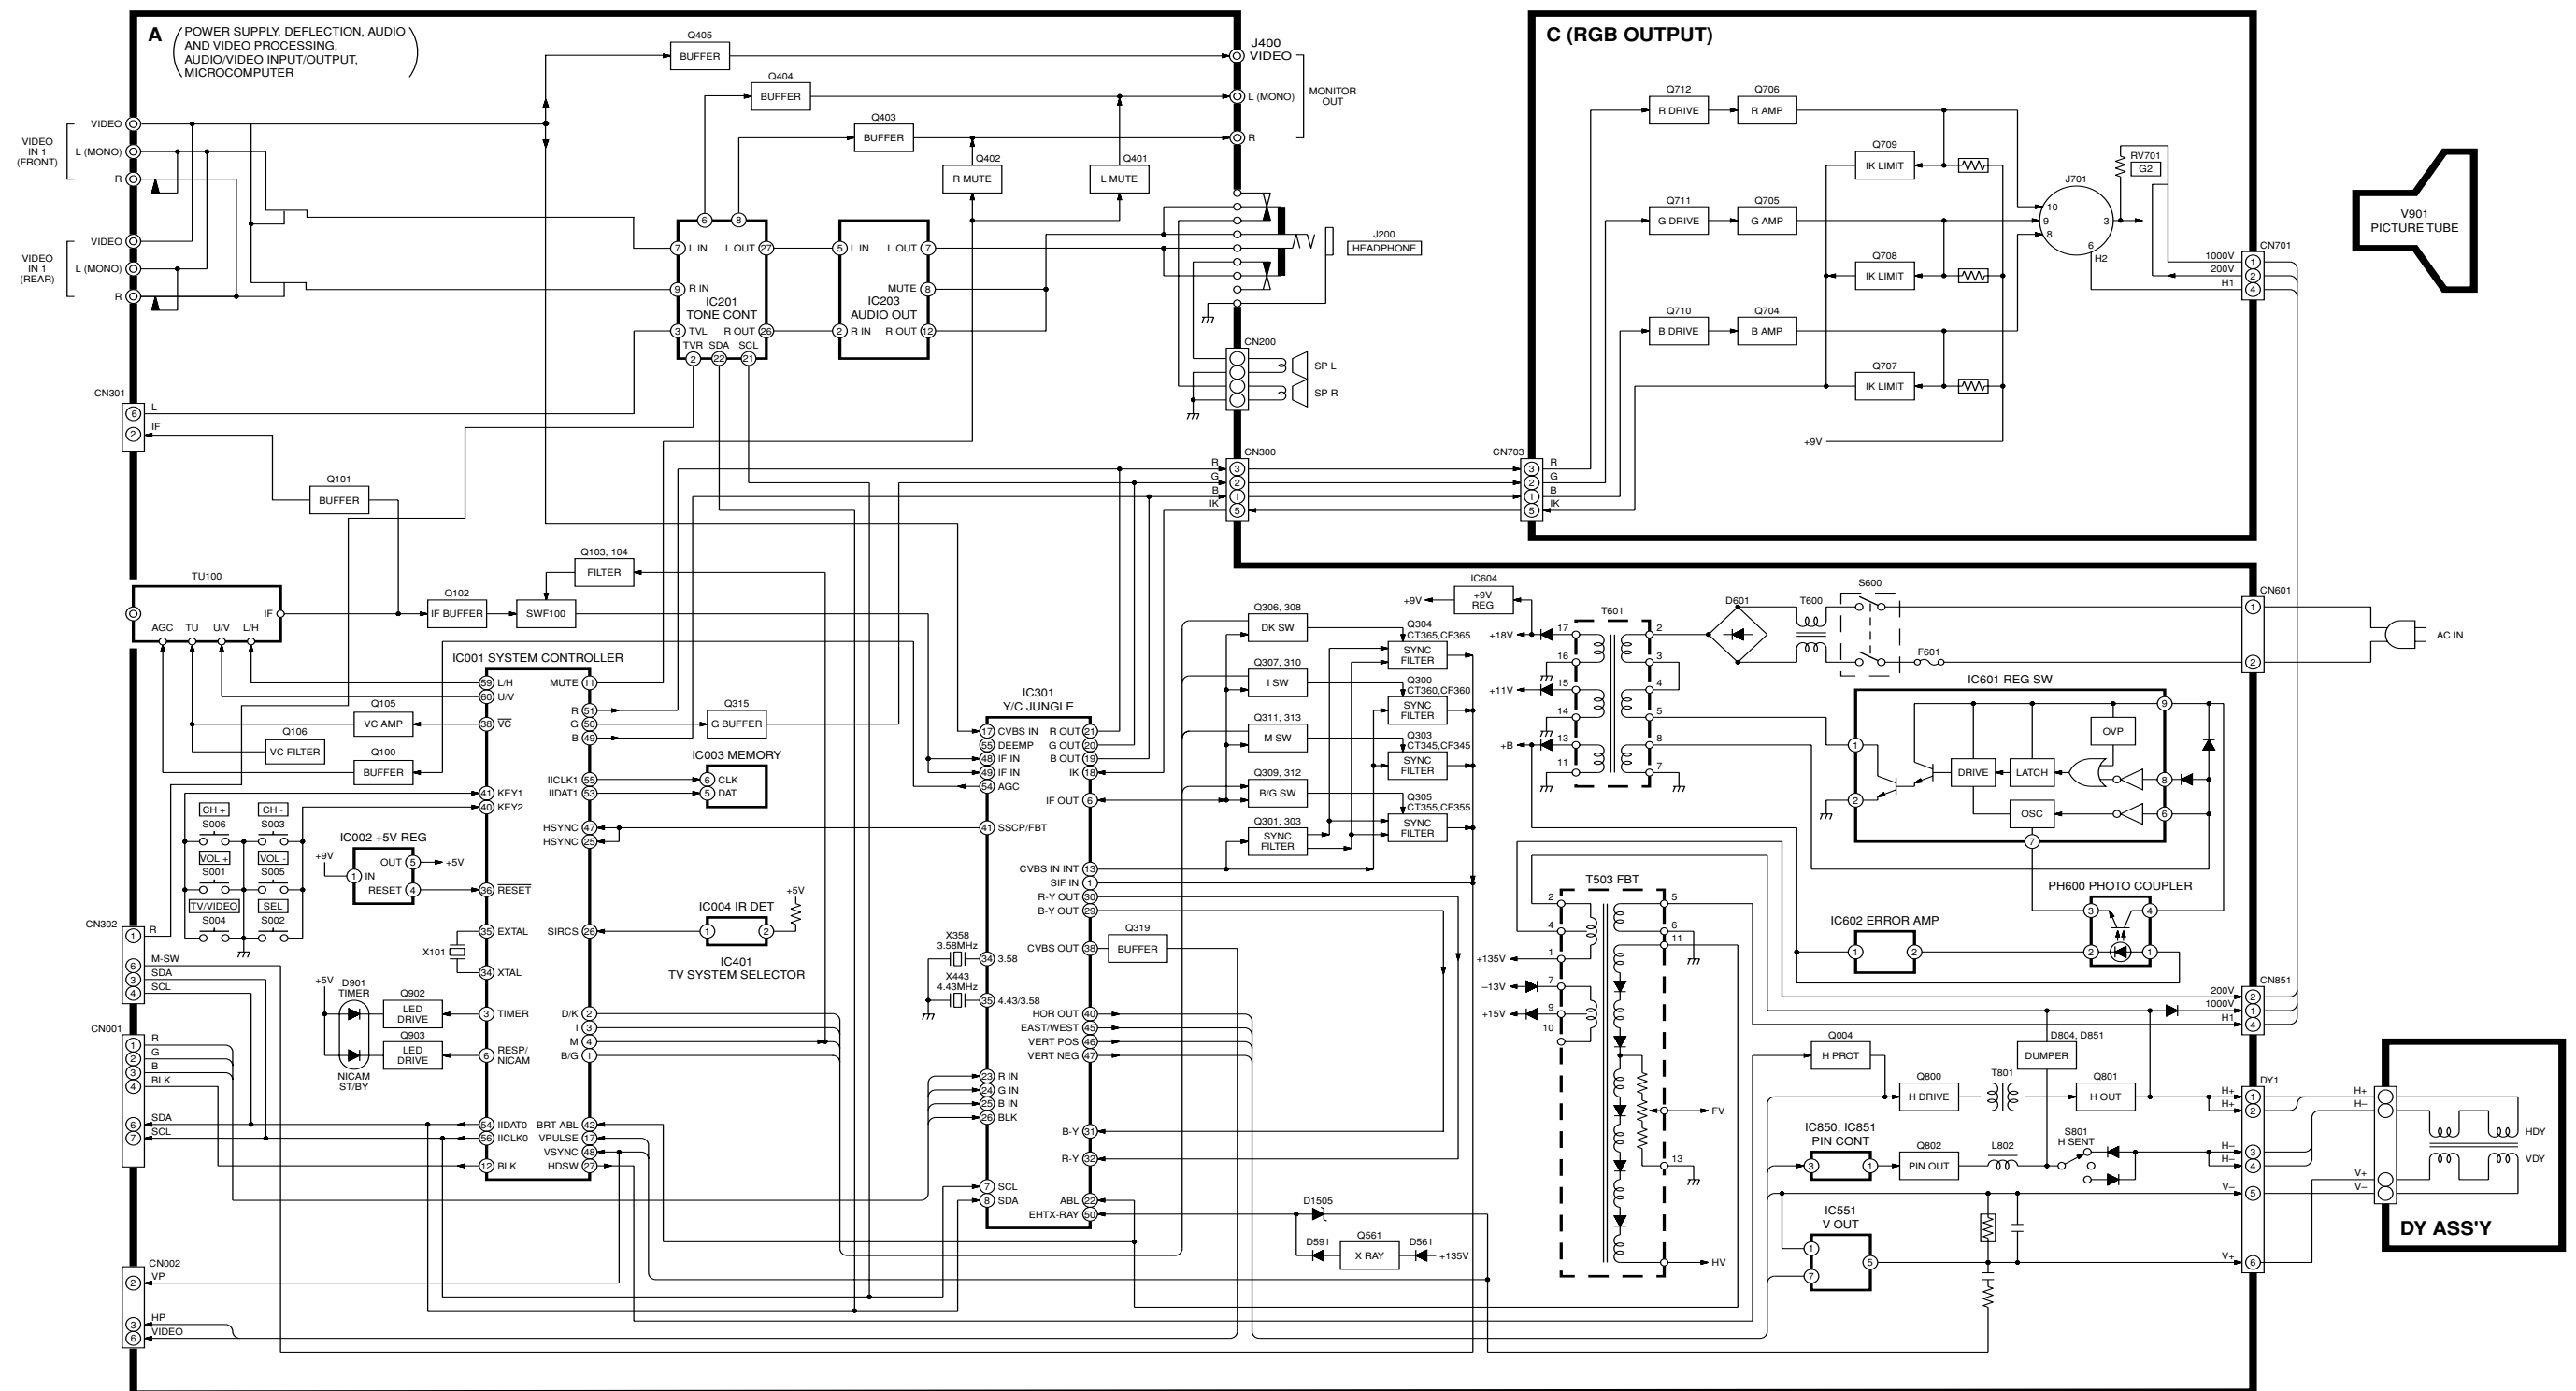

5-2. CIRCUIT BOARDS LOCATION

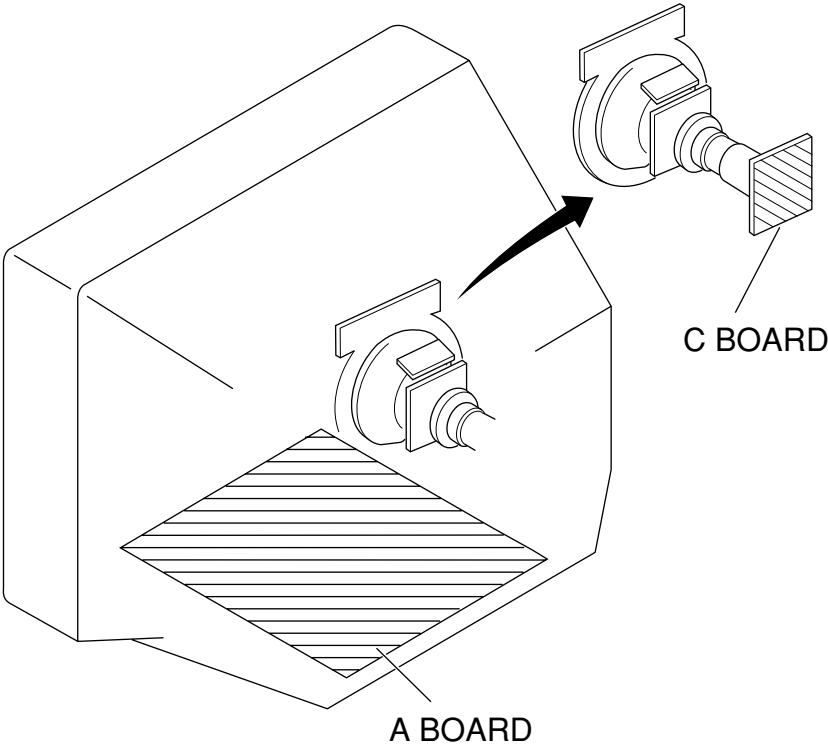

5-3. SCHEMATIC DIAGRAM

Note:

- All capacitors are in μF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
 $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$
- Indication of resistance which does not have rating electrical power is as follows.

Pitch: 5 mm
Rating electrical power 1/4W (CHIP: 1/10W)


-  : nonflammable resistor.
- Δ : internal component.
-  : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Redings are taken with a color-bar signal input.**
no mark : COMMON
() : PAL
[] : NTSC 3.58
- **Readings are taken with a 10 $\text{M}\Omega$ digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltage are in Volt.**
- * : **Cannot be measured.**
- **Circled numbers are waveform references.**
-  : B +bus.
-  : B -bus.
-  : signal path.

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
COIL	: *	ADJUSTMENT RESISTOR
	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark Δ are critical for safety. Replace only with part number specified.

J



The diagram is a detailed electronic schematic for a video amplifier, specifically a B-SSSBG2T video amplifier. It is organized into a grid with columns 1 through 7 and rows A through G. The circuit includes a variety of components: transistors (Q701-Q712), diodes (D701-D717), resistors (R701-R756), and capacitors (C701-C719). The circuit is powered by a 9V supply and includes various feedback and clamp networks. A picture tube (A34LRG70X) is shown on the right, with pins for KGKB G2, CV, KR, G1, G4, and HV. The diagram also includes a focus (FV) control and a focus voltage (FOCUS) output. A warning symbol is present near the picture tube. The bottom of the diagram is labeled 'B-SSSBG2T....C..HA14'.

	KV-HA14L80	KV-HA14P50
C241	0.0056 :CHIP	0.0033 :CHIP
C242	0.0056 :CHIP	0.0033 :CHIP
C316	47P :CHIP	#
IC001	CXP85224A-080S	CXP85224A-085S
IC301	TDA8844/N2	TDA8843/N2
L200	68	47
L310	27UH	#
Q314	UN2211	#
R201	3.3K :CHIP	6.8K :CHIP
R203	1.5K :CHIP	4.7K :CHIP

5-4. VOLTAGE MEASUREMENT

A BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
IC001	1	4.7		6	0		15	2.9
	2	0		7	0		16	0.5
	3	0		8	0.3		17	(3.4) [3.9]
	4	0	IC003	1	0		18	6.2
	5	5.0		2	0		19	2.6
	6	(0) [5.0]		3	0		20	2.6
	7	0		4	0		21	2.7
	8	(0) [0.2]		5	4.9		22	(2.4) [2.1]
	9	5.0		6	4.9		23	3.5
	10	5.0		7	0		24	3.5
	11	0		8	4.9		25	3.5
	12	0	IC004	1	4.9		26	0.1
	13	0		2	3.8		27	2.7
	14	0		3	0		28	2.7
	15	5.0	IC201	1	4.5		29	2.4
	16	0		2	4.5		30	2.4
	17	0		3	4.5		31	2.4
	18	0		4	4.5		32	2.4
	19	0.6		5	4.5		33	0.3
	20	0		6	4.5		34	2.5
	21	5.0		7	4.5		35	2.5
	22	0		8	4.5		36	4.7
	23	(0) [5.0]		9	4.5		37	8.1
	24	(5.0) [0]		10	4.5		38	2.5
	25	(0) [0.3]		11	4.5		39	4.9
	26	3.8		12	4.5		40	1.1
	27	0		13	4.5		41	(*) [0.6]
	28	0.5		14	4.5		42	3.1
	29	5.0		15	4.5		43	(4.0) [4.3]
	30	5.0		16	4.5		44	0
	31	5.0		17	4.5		45	(4.2) [4.0]
	32	0		18	4.5		46	1.4
	33	5.0		19	4.5		47	1.4
	34	2.5		20	0		48	4.7
	35	2.2		21	4.6		49	4.7
	36	5.0		22	4.6		50	1.5
	37	0		23	4.5		51	3.8
	38	(2.8) [4.9]		24	9		52	3.8
	39	0.5		25	0		53	(4.6) [1.1]
	40	5.0		26	3.8		54	(4.2) [8.0]
	41	5.0		27	3.8		55	2.9
	42	0.1		28	4.5		56	3.1
	43	0.7	IC203	1	0	IC402	1	1.4
	44	5.0		2	0		2	1.3
	45	(2.8) [5.0]		3	20.3		3	2.5
	46	(2.8) [5.0]		4	0		4	0
	47	0.4		5	0		5	2.5
	48	0		6	0		6	2.5
	49	0		7	(*) [9.8]		7	5.5
	50	0		8	0.4		8	8.9
	51	0		9	0	IC551	1	0.6
	52	0		10	21		2	12.9
	53	5.0		11	9.7		3	12.4
	54	4.8		12	9.7		4	(13) [-12.9]
	55	5.0	IC301	1	0.7		5	0.3
	56	4.8		2	3.7		6	12.7
	57	5.0		3	0.4		7	0.6
	58	0		4	0.4	IC601	1	0.9
	59	8.8		5	(2.6) [3.6]		2	0.2
	60	(0.2) [8.8]		6	(2.9) [4.6]		3	(45.5) [0.4]
	61	0		7	4.8		4	(8.7) [0.4]
	62	0		8	4.8		5	(0.2) [0]
	63	5.0		9	6.7	IC602	1	0
	64	5.0		10	0		2	121.9
				11	3.4		3	134
IC002	1	0		12	8.1	IC604	I	13.4
	2	5.0		13	(3.8) [4.4]		G	8.9
	3	4.9		14	0		O	0
	4	13.4						
	5	5.0						

A BOARD VOLTAGE LIST


Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
IC850	1	(*) [2.2]	Q106	B	0	Q320	B	0
	2	0.8		C	3.9		C	3.3
	3	1.0		E	0.6		E	0
	4	0	Q201	B	(0.4) [4.7]	Q400	B	13.3
	5	2.7		C	8.9		C	-0.3
	6	(*) [2.2]		E	5.3		E	13.4
	7	5.9	Q202	B	(6) [3.3]	Q401	B	0
	8	8.9		C	(0) [1.3]		C	0
IC851	1	(2.2) [2.7]		E	(13) [13.4]		E	(-0.5) [-0.1]
	2	3.2	Q203	B	(5.5) [5.2]	Q402	B	0
	3	3.2		C	13		C	0.4
	4	0		E	(6.1) [5.8]		E	(-0.5) [-0.2]
	5	(2.5) [2.8]	Q204	B	16.5	Q403	B	0.4
	6	(2.5) [2.8]		C	16.5		C	0
	7	(3.9) [3.7]		E	15.8		E	(0.4) [0.6]
	8	8.9	Q205	B	(4.8) [0.2]	Q404	B	5.2
PH600	1	133.4		C	(0) [0.2]		C	0
	2	(121.7) [*]		E	(0) [4.8]		E	4.5
	3	(134.4) [8.7]	Q208	B	1.3	Q405	B	3.2
	4	(134.4) [1.4]		C	1.4		C	0
Q001	B	0		E	4.8		E	2.5
	C	4.9	Q301	B	(3.0) [3.6]	Q406	B	1.8
	E	0		C	0		C	4.2
Q002	B	(5.0) [0]		E	(2.3) [3.9]		E	2.5
	C	(0) [4.9]	Q303	B	(2.3) [3.7]	Q407	B	(0.5) [3.5]
	E	0		C	(7.7) [6.1]		C	8.9
Q003	B	(0.4) [0.1]		E	(2.9) [4.2]		E	4.2
	C	5.0	Q305	B	(3.0) [4.0]	Q801	B	0.2
	E	0		C	(2.3) [3.5]		C	0
Q004	B	(0.2) [0.1]		E	(2.3) [3.6]		E	0
	C	5.0	Q309	B	(1.7) [3.8]	Q802	B	5.0
	E	(0.1) [0.2]		C	(4.5) [9.0]		C	(8) [9]
Q100	B	3.6 [7.4]		E	(2.9) [4.7]		E	0
	C	8.8	Q315	B	2.6	Q850	B	5.8
	E	(4.2) [8]		C	8.9		C	8.9
Q102	B	3.1		E	0		E	5.9
	C	2.4	Q318	B	2.1	Q851	B	(5.6) [6.0]
	E	9		C	(0.4) [5.4]		C	0
Q105	B	(0.4) [0]		E	2.7		E	5.9
	C	(9.3) [0]						
	E	(0) [0.6]						

C BOARD VOLTAGE LIST


Ref	Pin No	Voltage[v]	Ref	Pin No	Voltage[v]
J701	G2	(260.4) [258.4]	Q708	B	(120.7) [123.4]
	H2	*		C	7.4
	KB	120		E	(118.2) [124.3]
	KG	(120) [125]	Q709	B	(119) [120.1]
	KR	(117) [119]		C	(7.3) [8]
Q704	B	8.9		E	(116) [119.8]
	C	(121.7) [123.2]	Q710	B	2.7
	E	(8.3) [6.3]		C	8.3
Q705	B	8.9		E	2.0
	C	(8.3) [124.4]	Q711	B	2.7
	E	(8.3) [0.3]		C	8.3
Q706	B	8.9		E	2.0
	C	119	Q712	B	(2.7) [0.3]
	E	(8.3) [6]		C	(8.3) [6]
Q707	B	(122) [125.2]		E	(2.1) [1.8]
	C	7.3			
	E	(120) [125.2]			

5-5. WAVEFORMS

A BOARD WAVEFORM

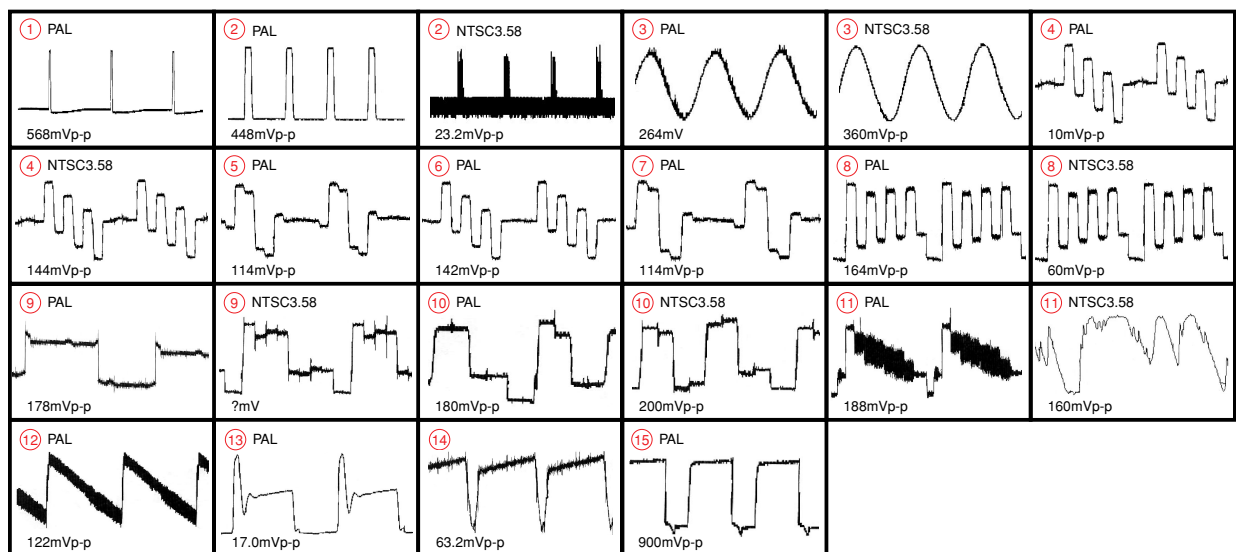

C BOARD WAVEFORM

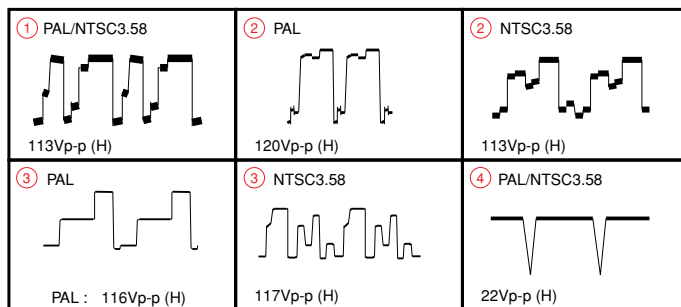


5-6. PRINTED WIRING BOARDS AND PARTS LOCATION

PRINTED WIRING BOARDS


C [RGB OUTPUT]

– C Board –

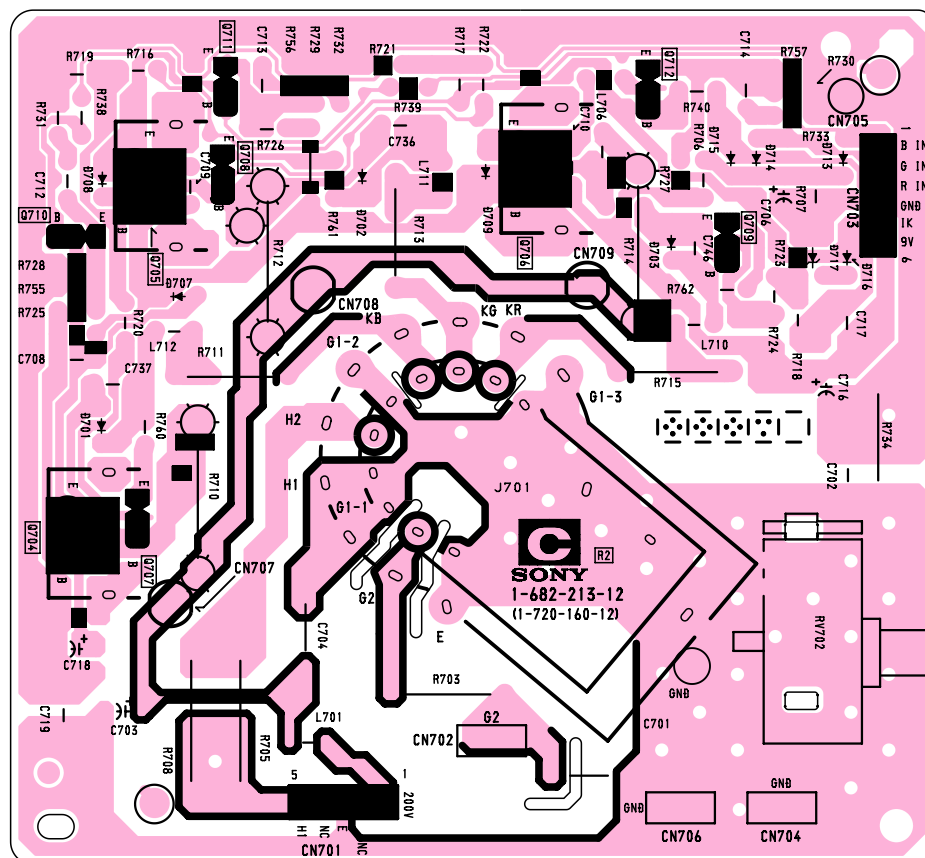


PRINTED WIRING BOARDS

A [POWER SUPPLY, DEFLECTION,
AUDIO AND VIDEO PROCESSING,
AUDIO/VIDEO INPUT/OUTPUT AND MICROCOMPUTER]

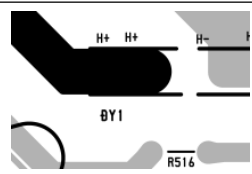

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

— A Board —





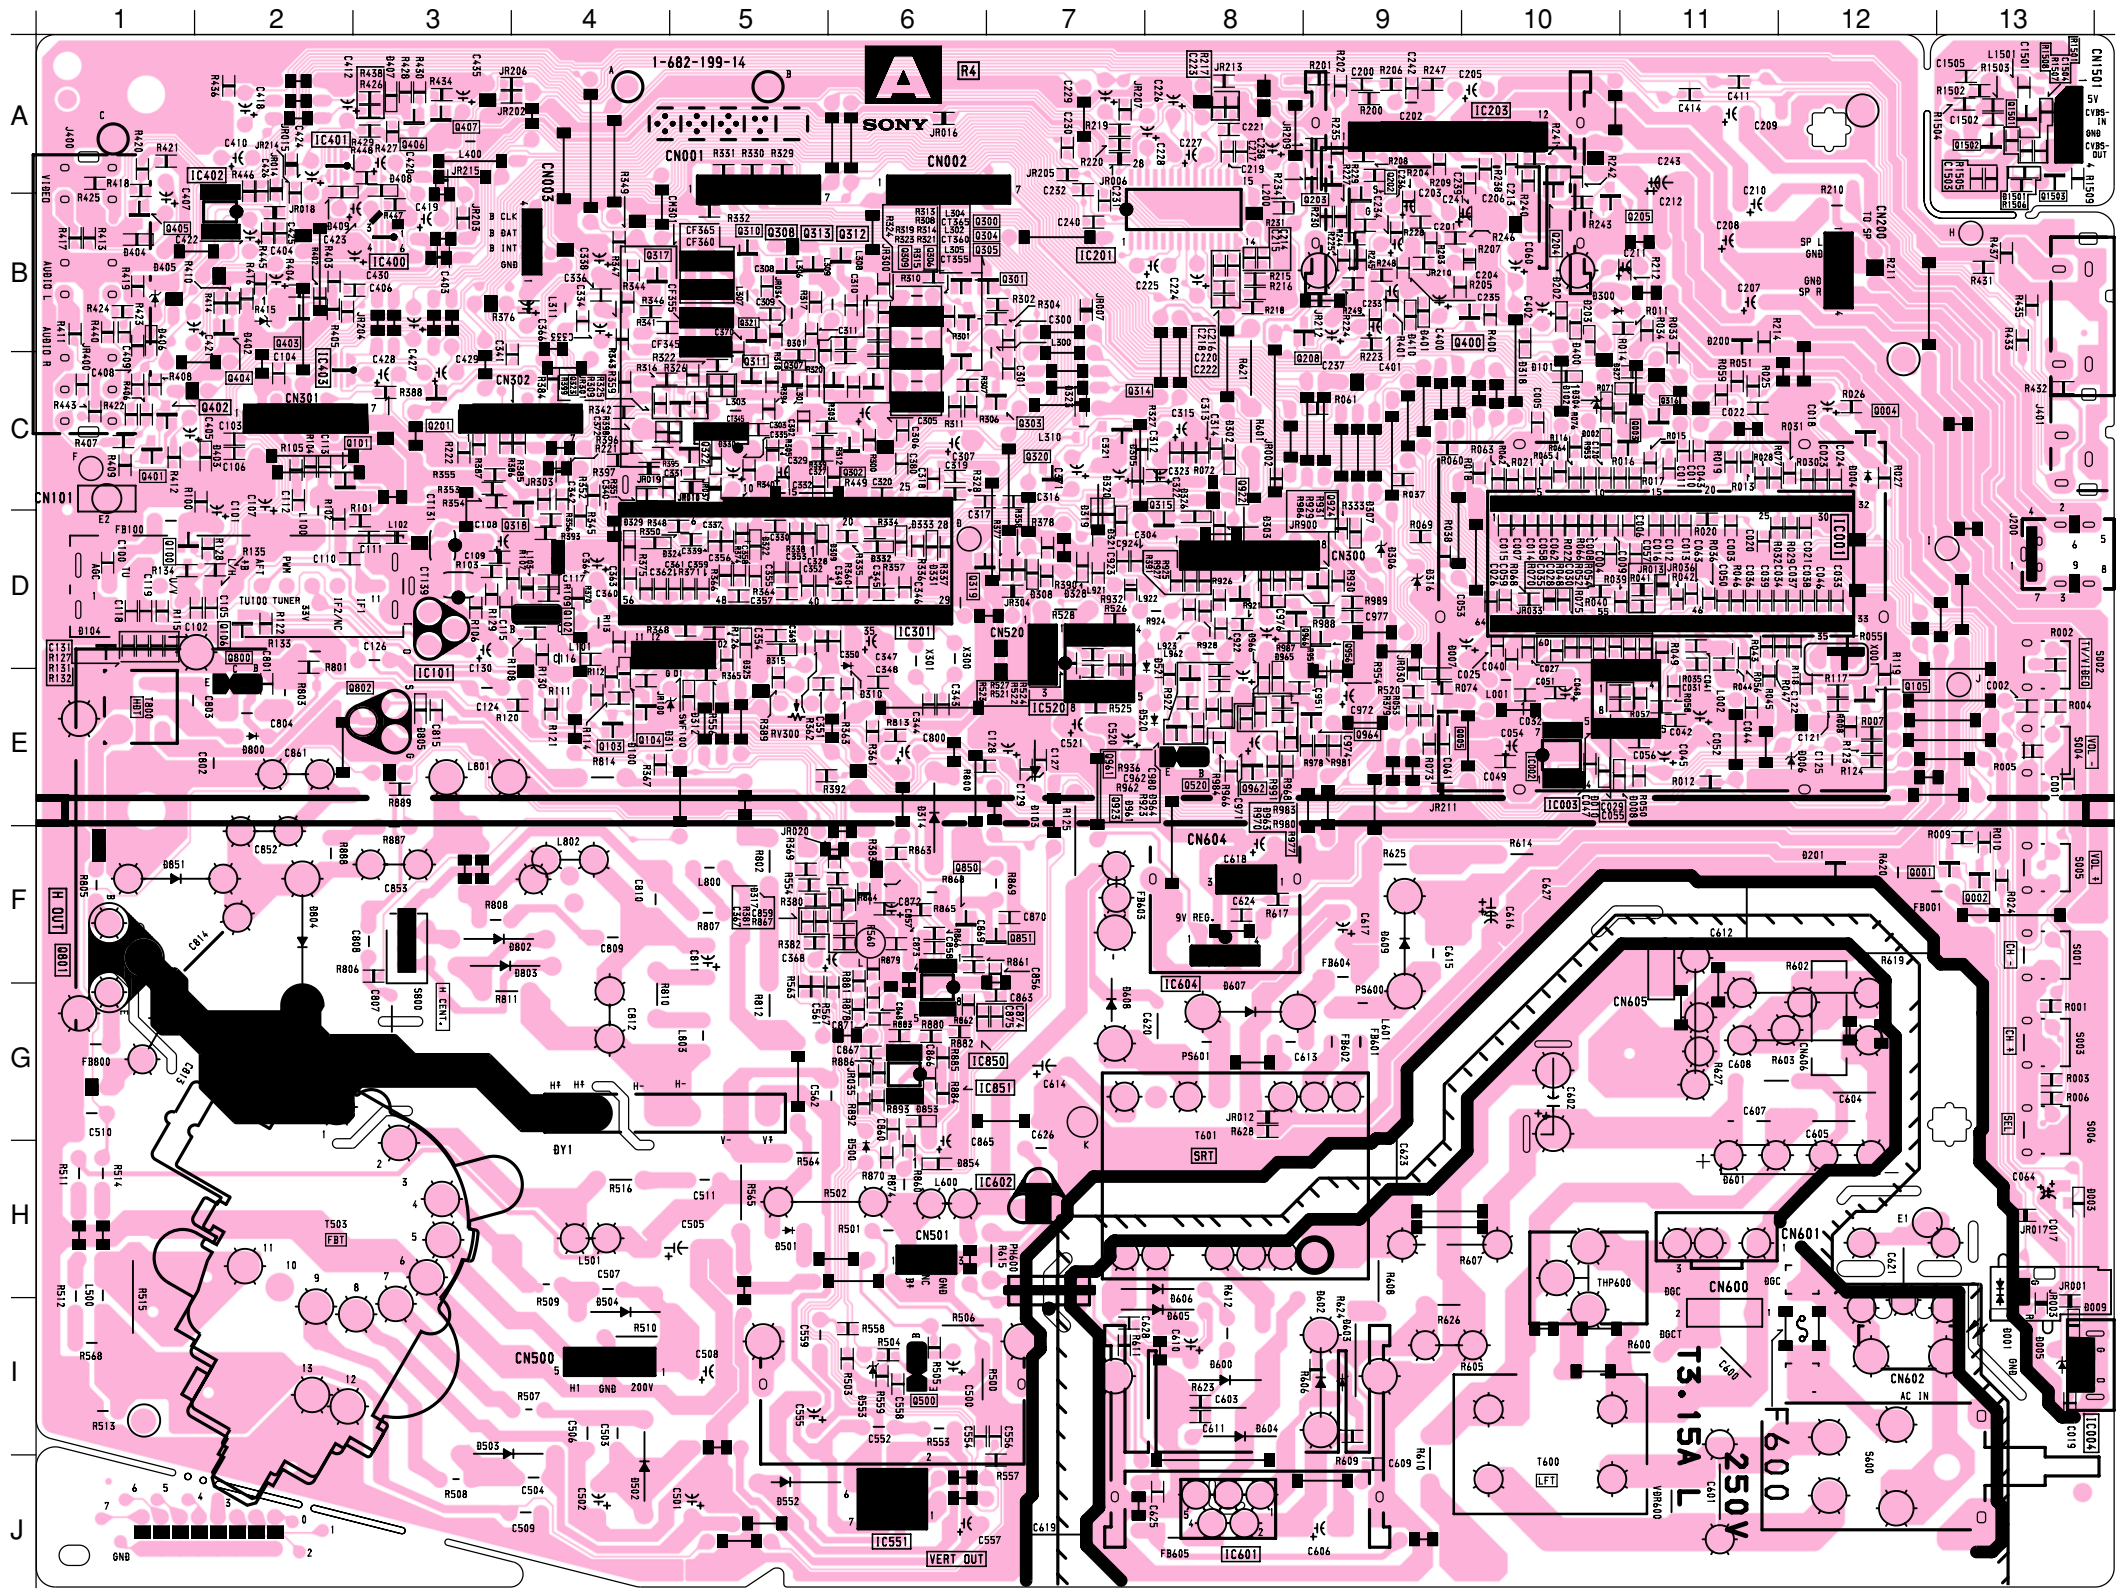


A BOARD







IC		DIODE	
IC001	D-12	D001	I-13
IC002	E-10	D002	C-10
IC003	E-10	D003	H-13
IC004	I-13	D004	C-12
IC101	D-3	D005	I-13
IC201	B-7	D006	E-12
IC203	A-10	D007	D-9
IC301	D-6	D008	E-11
IC400	B-3	D009	I-13
IC401	A-2	D100	E-4
IC402	A-2	D101	C-10
IC403	C-2	D102	C-10
IC501	J-6	D103	E-7
IC502	J-8	D104	D-1
IC503	H-7	D105	C-10
IC504	G-8	D106	C-7
IC505	G-6	D107	D-9
IC506	G-6	D108	D-9
IC507	H-7	D109	D-9
IC508	H-7	D110	D-9
IC509	H-7	D111	D-9
IC510	H-7	D112	D-9
IC511	H-7	D113	D-9
IC512	H-7	D114	D-9
IC513	H-7	D115	D-9
IC514	H-7	D116	D-9
IC515	H-7	D117	D-9
IC516	H-7	D118	D-9
IC517	H-7	D119	D-9
IC518	H-7	D120	D-9
IC519	H-7	D121	D-9
IC520	H-7	D122	D-9
IC521	H-7	D123	D-9
IC522	H-7	D124	D-9
IC523	H-7	D125	D-9
IC524	H-7	D126	D-9
IC525	H-7	D127	D-9
IC526	H-7	D128	D-9
IC527	H-7	D129	D-9
IC528	H-7	D130	D-9
IC529	H-7	D131	D-9
IC530	H-7	D132	D-9
IC531	H-7	D133	D-9
IC532	H-7	D134	D-9
IC533	H-7	D135	D-9
IC534	H-7	D136	D-9
IC535	H-7	D137	D-9
IC536	H-7	D138	D-9
IC537	H-7	D139	D-9
IC538	H-7	D140	D-9
IC539	H-7	D141	D-9
IC540	H-7	D142	D-9
IC541	H-7	D143	D-9
IC542	H-7	D144	D-9
IC543	H-7	D145	D-9
IC544	H-7	D146	D-9
IC545	H-7	D147	D-9
IC546	H-7	D148	D-9
IC547	H-7	D149	D-9
IC548	H-7	D150	D-9
IC549	H-7	D151	D-9
IC550	H-7	D152	D-9
IC551	H-7	D153	D-9
IC552	H-7	D154	D-9
IC553	H-7	D155	D-9
IC554	H-7	D156	D-9
IC555	H-7	D157	D-9
IC556	H-7	D158	D-9
IC557	H-7	D159	D-9
IC558	H-7	D160	D-9
IC559	H-7	D161	D-9
IC560	H-7	D162	D-9
IC561	H-7	D163	D-9
IC562	H-7	D164	D-9
IC563	H-7	D165	D-9
IC564	H-7	D166	D-9
IC565	H-7	D167	D-9
IC566	H-7	D168	D-9
IC567	H-7	D169	D-9
IC568	H-7	D170	D-9
IC569	H-7	D171	D-9
IC570	H-7	D172	D-9
IC571	H-7	D173	D-9
IC572	H-7	D174	D-9
IC573	H-7	D175	D-9
IC574	H-7	D176	D-9
IC575	H-7	D177	D-9
IC576	H-7	D178	D-9
IC577	H-7	D179	D-9
IC578	H-7	D180	D-9
IC579	H-7	D181	D-9
IC580	H-7	D182	D-9
IC581	H-7	D183	D-9
IC582	H-7	D184	D-9
IC583	H-7	D185	D-9
IC584	H-7	D186	D-9
IC585	H-7	D187	D-9
IC586	H-7	D188	D-9
IC587	H-7	D189	D-9
IC588	H-7	D190	D-9
IC589	H-7	D191	D-9
IC590	H-7	D192	D-9
IC591	H-7	D193	D-9
IC592	H-7	D194	D-9
IC593	H-7	D195	D-9
IC594	H-7	D196	D-9
IC595	H-7	D197	D-9
IC596	H-7	D198	D-9
IC597	H-7	D199	D-9
IC598	H-7	D200	D-9
IC599	H-7	D201	D-9
IC600	H-7	D202	D-9
IC601	H-7	D203	D-9
IC602	H-7	D204	D-9
IC603	H-7	D205	D-9
IC604	H-7	D206	D-9
IC605	H-7	D207	D-9
IC606	H-7	D208	D-9
IC607	H-7	D209	D-9
IC608	H-7	D210	D-9
IC609	H-7	D211	D-9
IC610	H-7	D212	D-9
IC611	H-7	D213	D-9
IC612	H-7	D214	D-9
IC613	H-7	D215	D-9
IC614	H-7	D216	D-9
IC615	H-7	D217	D-9
IC616	H-7	D218	D-9
IC617	H-7	D219	D-9
IC618	H-7	D220	D-9
IC619	H-7	D221	D-9
IC620	H-7	D222	D-9
IC621	H-7	D223	D-9
IC622	H-7	D224	D-9
IC623	H-7	D225	D-9
IC624	H-7	D226	D-9
IC625	H-7	D227	D-9
IC626	H-7	D228	D-9
IC627	H-7	D229	D-9
IC628	H-7	D230	D-9
IC629	H-7	D231	D-9
IC630	H-7	D232	D-9
IC631	H-7	D233	D-9
IC632	H-7	D234	D-9
IC633	H-7	D235	D-9
IC634	H-7	D236	D-9
IC635	H-7	D237	D-9
IC636	H-7	D238	D-9
IC637	H-7	D239	D-9
IC638	H-7	D240	D-9
IC639	H-7	D241	D-9
IC640	H-7	D242	D-9
IC641	H-7	D243	D-9
IC642	H-7	D244	D-9
IC643	H-7	D245	D-9
IC644	H-7	D246	D-9
IC645	H-7	D247	D-9
IC646	H-7	D248	D-9
IC647	H-7	D249	D-9
IC648	H-7	D250	D-9
IC649	H-7	D251	D-9
IC650	H-7	D252	D-9
IC651	H-7	D253	D-9
IC652	H-7	D254	D-9
IC653	H-7	D255	D-9
IC654	H-7	D256	D-9
IC655	H-7	D257	D-9
IC656	H-7	D258	D-9
IC657	H-7	D259	D-9
IC658	H-7	D260	D-9
IC659	H-7	D261	D-9
IC660	H-7	D262	D-9
IC661	H-7	D263	D-9
IC662	H-7	D264	D-9
IC663	H-7	D265	D-9
IC664	H-7	D266	D-9
IC665	H-7	D267	D-9
IC666	H-7	D268	D-9
IC667	H-7	D269	D-9
IC668	H-7	D270	D-9
IC669	H-7	D271	D-9
IC670	H-7	D272	D-9
IC671	H-7	D273	D-9
IC672	H-7	D274	D-9
IC673	H-7	D275	D-9
IC674	H-7	D276	D-9
IC675	H-7	D277	D-9
IC676	H-7	D278	D-9
IC677	H-7	D279	D-9
IC678	H-7	D280	D-9
IC679	H-7	D281	D-9
IC680	H-7	D282	D-9
IC681	H-7	D283	D-9
IC682	H-7	D284	D-9
IC683	H-7	D285	D-9
IC684	H-7	D286	D-9
IC685	H-7	D287	D-9
IC686	H-7	D288	D-9
IC687	H-7	D289	D-9
IC688	H-7	D290	D-9
IC689	H-7	D291	D-9
IC690	H-7	D292	D-9
IC691	H-7	D293	D-9
IC692	H-7	D294	D-9
IC693	H-7	D295	D-9
IC694	H-7	D296	D-9
IC695	H-7	D297	D-9
IC696	H-7	D298	D-9
IC697	H-7	D299	D-9
IC698	H-7	D300	D-9
IC699	H-7	D301	D-9
IC700	H-7	D302	D-9
IC701	H-7	D303	D-9
IC702	H-7	D304	D-9
IC703	H-7	D305	D-9
IC704	H-7	D306	D-9
IC705	H-7	D307	D-9
IC706	H-7	D308	D-9
IC707	H-7	D309	D-9
IC708	H-7	D310	D-9
IC709	H-7	D311	D-9
IC710	H-7	D312	D-9
IC711	H-7	D313	D-9
IC712	H-7	D314	D-9
IC713	H-7	D315	D-9
IC714	H-7	D316	D-9
IC715	H-7	D317	D-9
IC716	H-7	D318	D-9
IC717	H-7	D319	D-9
IC718	H-7	D320	D-9
IC719	H-7	D321	D-9
IC720	H-7	D322	D-9
IC721	H-7	D323	D-9
IC722	H-7	D324	D-9
IC723	H-7	D325	D-9
IC724	H-7	D326	D-9
IC725	H-7	D327	D-9
IC726	H-7	D328	D-9
IC727	H-7	D329	D-9
IC728	H-7	D330	D-9
IC729	H-7	D331	D-9
IC730	H-7	D332	D-9
IC731	H-7	D333	D-9
IC732	H-7	D334	D-9
IC733	H-7	D335	D-9
IC734	H-7	D336	D-9
IC735	H-7	D337	D-9
IC736	H-7	D338	D-9
IC737	H-7	D339	D-9
IC738	H-7	D340	D-9
IC739	H-7	D341	D-9
IC740	H-7	D342	D-9
IC741	H-7	D343	D-9
IC742	H-7	D344	D-9
IC743	H-7	D345	D-9
IC744	H-7	D346	D-9
IC745	H-7	D347	D-9
IC746	H-7	D348	D-9
IC747	H-7	D349	D-9
IC748	H-7	D350	D-9
IC749	H-7	D351	D-9
IC750	H-7	D352	D-9
IC751	H-7	D353	D-9
IC752	H-7	D354	D-9
IC753	H-7	D355	D-9
IC754	H-7	D356	D-9
IC755	H-7	D357	D-9
IC756	H-7	D358	D-9
IC757	H-7	D359	D-9
IC758	H-7	D360	D-9
IC759	H-7	D361	D-9
IC760	H-7	D362	D-9
IC761	H-7	D363	D-9
IC762	H-7	D364	D-9
IC763	H-7	D365	D-9
IC764	H-7	D366	D-9
IC765	H-7	D367	D-9
IC766	H-7	D368	D-9
IC767	H-7	D369	D-9
IC768	H-7	D370	D-9
IC769	H-7	D371	D-9
IC770	H-7	D372	D-9
IC771	H-7	D373	D-9
IC772	H-7	D374	D-9
IC773	H-7	D375	D-9
IC774	H-7	D376	D-9
IC775	H-7	D377	D-9
IC776	H-7	D378	D-9
IC777	H-7	D379	D-9
IC778	H-7	D380	D-9
IC779	H-7	D381	D-9
IC780	H-7	D382	D-9
IC781	H-7	D383	D-9
IC782	H-7	D384	D-9
IC783	H-7	D385	D-9
IC784	H-7	D386	D-9
IC785	H-7	D387	D-9
IC786	H-7	D388	D-9
IC787	H-7	D389	D-9
IC788	H-7	D390	D-9
IC789	H-7	D391	D-9
IC790	H-7	D392	D-9
IC791	H-7	D393	D-9
IC792	H-7	D394	D-9
IC793	H-7	D395	D-9
IC794	H-7	D396	D-9
IC795	H-7	D397	D-9
IC796	H-7	D398	D-9
IC797	H-7	D399	D-9
IC798	H-7	D400	D-9
IC799	H-7	D401	D-9
IC800	H-7	D402	D-9
IC801	H-7	D403	D-9
IC802	H-7	D404	D-9
IC803	H-7	D405	D-9
IC804	H-7	D406	D-9
IC805	H-7	D407	D-9
IC806	H-7	D408	D-9
IC807	H-7	D409	D-9
IC808	H-7	D410	D-9
IC809	H-7	D411	D-9
IC810	H-7	D412	D-9
IC811	H-7	D413	D-9
IC812	H-7	D414	D-9
IC813	H-7	D415	D-9
IC814	H-7	D416	D-9
IC815	H-7	D417	D-9
IC816	H-7	D418	D-9
IC817	H-7	D419	D-9</






5-7. SEMICONDUCTORS

DIODE

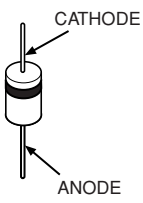
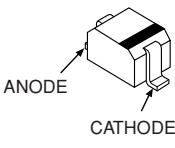
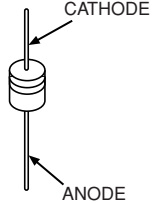
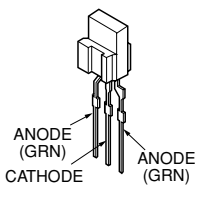
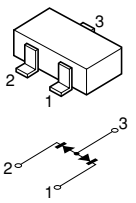
				
D1NL20U D3S6M-F ELIZ EG01CV1 HZS361-TE GPO8D	EGP20G NNCD8.2A-T1 NNCD9.1A-T1 RU4AM-T3 1SS119-25	RD5.6ESB2 RD5.1SB-T2 UDZSTE-179.1B 1SS355TE-17	RD2.2ES-B2 RD15ES-B1 S3L20UF4 RD13SB2	SPB-25MVWF DA204K

TRANSISTOR

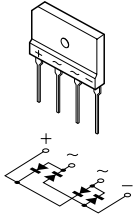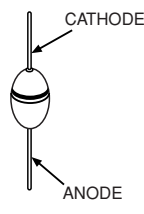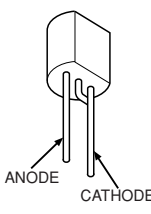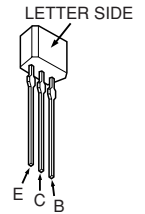

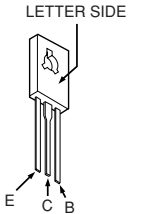
					
D3SB60F3	BY228	UPC574J	2SC2785-HFE	2SA1091-0	2SC2611

					
IRF614-005	2SC3779C	2SC3209LK	2SD2624-CA	MSD601-RT1 MSB709-RT1 UN2211 UN2213 UN2216	2SA1162-G DTC144EKA

IC

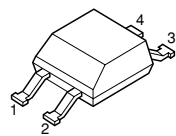				 DIP TOP VIEW Dual In-line Package Pin 6~98
2SK208GR-TE85L	PC123F2	SBX3081-21	SE-135N	M24C08-BN6 (A)(8 PIN) CXP85224A-080S CXP85224A-085S TDA7438D013TR

IC

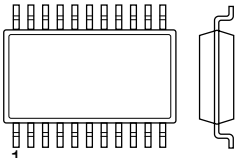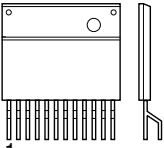SOP  TOP VIEW Small Outline L-Leaded Pin 8~98	MARKING SIDE VIEW  Zig-zag In -line Package Pin 6~99		
MM1319AFBE NJM2903M	STR-F6707A TDA8843	AN5522	

SECTION 6 EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


The components identified by shading and mark $\triangle$ are critical for safety.

Replace only with part number specified.

6-1. PICTURE TUBE AND CHASSIS

- : 7-685-648-79 SCREW +BVTP 3 × 12
- : 7-685-663-71 SCREW +BVTP 4 × 16

Caution : Do not take out CRT Support block while TV set in standing position.

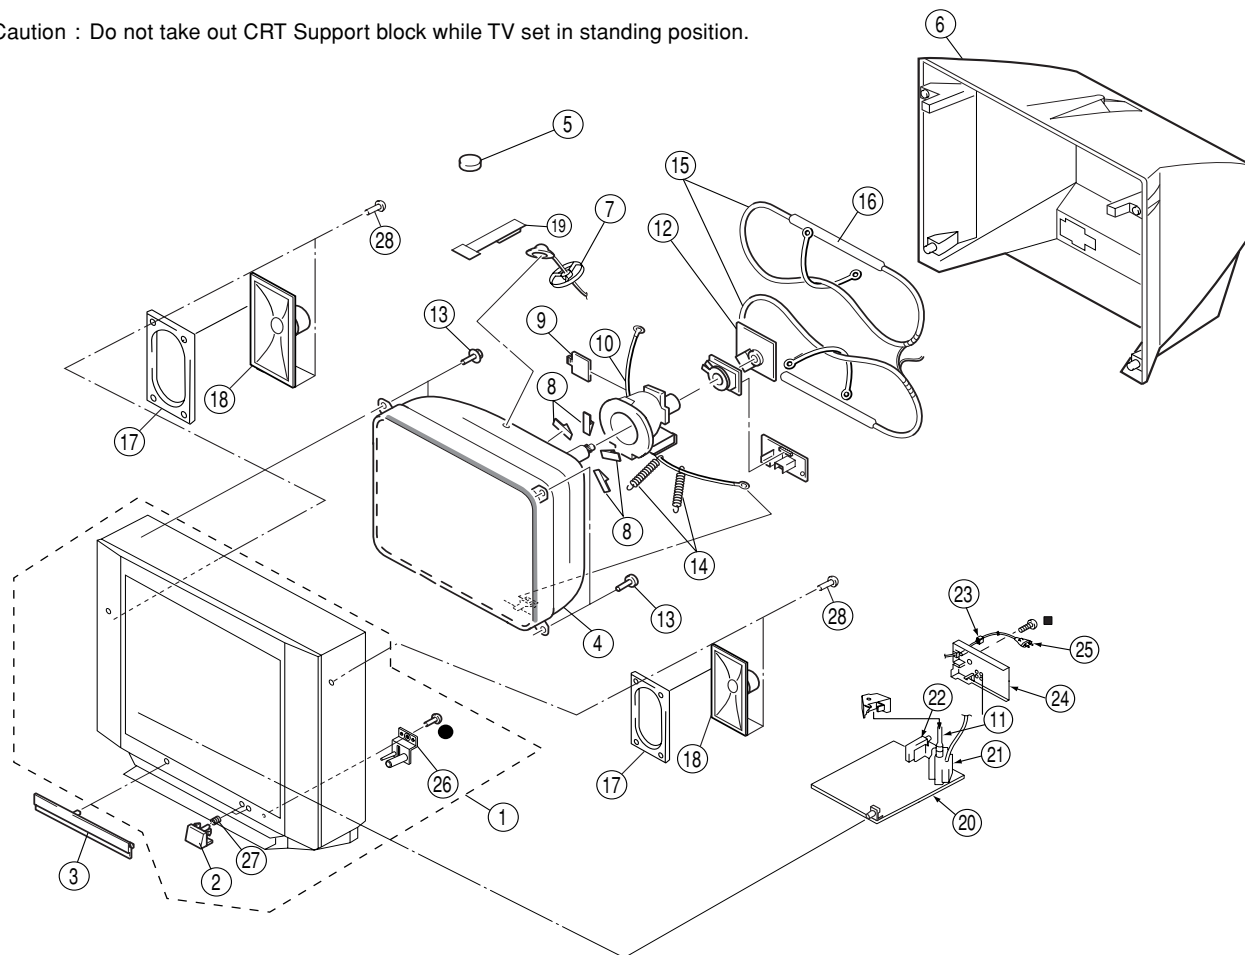

REF. NO.	PART NO.	DESCRIPTION	REMARK
1	X-4039-708-1	BEZNET ASSY	2, 28, 29
2	4-083-943-01	BUTTON POWER	
3	X-4039-871-1	DOOR ASSY CONTROL (KV-HA14L80)	
	X-4039-870-1	DOOR ASSY CONTROL (KV-HA14P50)	
4	$\triangle$ 8-735-570-05	PICTURE TUBE (A34LRG70X)	
5	1-452-032-00	MAGNET DISC	
6	4-083-989-01	COVER REAR	
7	* 3-704-372-11	HOLDER HV CABLE	
8	4-081-577-01	SPACER (S) DY	
9	4-077-228-02	PIECE TLH CONVERGENCE	
10	$\triangle$ 8-451-401-11	DEFLECTION YOKE (Y14RSA-S)	
11	1-900-212-58	LEAD ASSY FOCUS	
12	* A-1332-226-A	C BOARD MOUNTED	
13	4-365-808-01	SCREW (5) TAPPING (4)	
14	4-078-765-01	SPRING EXTENSION	
15	$\triangle$ 1-419-185-11	COIL DEGAUSSING	

REF. NO.	PART NO.	DESCRIPTION	REMARK
16	4-072-857-02	CUSHION DGC	
17	* 4-038-987-11	CUSHION SPEAKER	
18	1-544-763-11	SPEAKER (12 × 5 CM)	
19	4-051-736-42	PIECE A (90) CONV CORRECT	
20	* A-1300-097-A	A BOARD COMPLETE (KV-HA14L80)	
	* A-1300-226-A	A BOARD COMPLETE (KV-HA14P50)	
21	$\triangle$ 1-453-309-21	TRANSFORMER ASSY FLY BACK (NX-4450/M3A4)	
22	8-598-591-00	TUNER BT-AG402	
23	4-022-115-00	HOLDER AC CORD	
24	4-059-710-21	BRACKET TERMINAL BOARD	
25	$\triangle$ 1-823-480-11	CORD AC POWER (WITH CONNECTOR)	
26	* 4-083-944-01	BAR OPTICAL	
27	4-036-405-11	SPRING COMPRESSION	
28	4-054-981-02	SCREW STEP TAPPING (4)	



SECTION 7 ELECTRICAL PARTS LIST

NOTE:

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

• All resistors are in ohms
• F : nonflammable

CAPACITORS

• MF : μ F, PF : μ μ F

COILS

• MMH : mH, UH : μ H

REF NO.	PART NO.	DESCRIPTION	REMARK
	* A-1300-097-A	A BOARD COMPLETE (KV-HA14L80)	
	* A-1300-226-A	A BOARD COMPLETE (KV-HA14P50)	

	1-533-223-11	CLIP, FUSE	
	* 4-055-304-01	HOLDER, LED	
	* 4-082-454-01	HOLDER, FBT	
	4-352-844-01	PIN, LEAD, COATING	
	4-382-854-01	SCREW (M3X8), P, SW (+)	
	4-382-854-11	SCREW (M3X10), P, SW (+)	
	4-382-854-21	SCREW (M3X14), P, SW (+)	
	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
		<CAPACITOR>	
C001	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V
C002	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V
C004	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C005	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C006	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C007	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C009	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C010	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C011	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C012	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C013	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C014	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C015	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C016	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C017	1-126-947-11	ELECT 47UF	20.00% 16V
C018	1-126-961-11	ELECT 2.2UF	20.00% 50V
C019	8-719-036-94	RD5.6SB-T1	
C020	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V
C021	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C022	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C023	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C024	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C025	1-135-834-91	CERAMIC CHIP 2.2E+06PF	6.3V
C026	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C027	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C028	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C029	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C030	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C031	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C032	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V
C033	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C034	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C035	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C036	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C037	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C038	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C039	1-163-038-91	CERAMIC CHIP 0.1UF	25V

REF NO.	PART NO.	DESCRIPTION	REMARK
C041	1-162-924-11	CERAMIC CHIP 56PF	5.00% 50V
C042	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C043	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C044	1-162-924-11	CERAMIC CHIP 56PF	5.00% 50V
C045	1-126-962-11	ELECT 3.3UF	20.00% 50V
C046	1-162-995-11	CERAMIC CHIP 0.022UF	50V
C047	1-113-619-11	CERAMIC CHIP 0.47UF	10V
C048	1-126-965-91	ELECT 22UF	20.00% 50V
C049	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C050	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C051	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C052	1-126-935-11	ELECT 470UF	20.00% 10V
C053	1-126-935-11	ELECT 470UF	20.00% 10V
C054	1-104-666-11	ELECT 220UF	20.00% 25V
C055	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
C056	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C057	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
C058	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
C061	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C063	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C100	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C101	1-126-964-11	ELECT 10UF	20.00% 50V
C102	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C103	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C104	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C105	1-163-038-91	CERAMIC CHIP 0.1UF	25V
C106	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C107	1-126-935-11	ELECT 470UF	20.00% 16V
C108	1-126-767-11	ELECT 1000UF	20.00% 16V
C109	1-163-017-00	CERAMIC CHIP 0.0047UF	10.00% 50V
C111	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C115	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C116	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C117	1-162-924-11	CERAMIC CHIP 56PF	5.00% 50V
C121	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C122	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V
C124	1-130-493-00	MYLAR 0.068UF	5.00% 50V
C125	1-130-495-00	MYLAR 0.1UF	5.00% 50V
C126	1-130-493-00	MYLAR 0.068UF	5.00% 50V
C127	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C128	1-126-965-91	ELECT 22UF	20.00% 50V
C129	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C131	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C200	1-163-023-00	CERAMIC CHIP 0.015UF	10.00% 50V
C201	1-163-023-00	CERAMIC CHIP 0.015UF	10.00% 50V
C202	1-130-495-00	MYLAR 0.1UF	5.00% 50V
C203	1-126-961-11	ELECT 2.2UF	20.00% 50V
C204	1-130-495-00	MYLAR 0.1UF	5.00% 50V
C205	1-126-961-11	ELECT 2.2UF	20.00% 50V
C206	1-126-968-11	ELECT 100UF	20.00% 50V
C207	1-126-942-61	ELECT 1000UF	20.00% 25V

The components identified by shading
and mark $\triangle$ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
C208	1-128-551-11	ELECT	22UF 20.00% 25V	C343	1-162-917-11	CERAMIC CHIP	15PF 5.00% 50V
C209	1-126-942-61	ELECT	1000UF 20.00% 25V	C344	1-162-917-11	CERAMIC CHIP	15PF 5.00% 50V
C210	1-128-551-11	ELECT	22UF 20.00% 25V	C345	1-162-967-11	CERAMIC CHIP	0.0033UF 10.00% 50V
C211	1-126-959-11	ELECT	0.47UF 20.00% 50V	C346	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C212	1-126-942-61	ELECT	1000UF 20.00% 25V	C347	1-126-933-11	ELECT	100UF 20.00% 16V
C213	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V	C348	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C214	1-107-725-11	CERAMIC CHIP	0.1UF 10.00% 16V	C349	1-164-346-11	CERAMIC CHIP	1UF 16V
C215	1-107-823-11	CERAMIC CHIP	0.47UF 10.00% 16V	C352	1-162-966-11	CERAMIC CHIP	0.0022UF 10.00% 50V
C216	1-107-725-11	CERAMIC CHIP	0.1UF 10.00% 16V	C353	1-107-823-11	CERAMIC CHIP	0.47UF 10.00% 16V
C217	1-164-227-11	CERAMIC CHIP	0.022UF 10.00% 16V	C354	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V
C218	1-107-823-11	CERAMIC CHIP	0.47UF 10.00% 16V	C355	1-107-823-11	CERAMIC CHIP	0.47UF 10.00% 16V
C219	1-104-509-11	CERAMIC CHIP	0.018UF 10.00% 16V	C356	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V
C220	1-164-227-11	CERAMIC CHIP	0.022UF 10.00% 16V	C357	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C221	1-162-969-11	CERAMIC CHIP	0.0068UF 10.00% 25V	C358	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V
C222	1-104-509-11	CERAMIC CHIP	0.018UF 10.00% 16V	C359	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C223	1-162-969-11	CERAMIC CHIP	0.0068UF 10.00% 25V	C360	1-130-495-00	MYLAR	0.1UF 5.00% 50V
C224	1-126-960-11	ELECT	1UF 20.00% 50V	C361	1-135-834-91	CERAMIC CHIP	2.2E+06PF 6.3V
C225	1-126-960-11	ELECT	1UF 20.00% 50V	C362	1-113-619-11	CERAMIC CHIP	0.47UF 10V
C226	1-126-963-11	ELECT	4.7UF 20.00% 50V	C363	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V
C227	1-126-947-11	ELECT	47UF 20.00% 16V	C364	1-126-964-11	ELECT	10UF 20.00% 50V
C228	1-126-961-11	ELECT	2.2UF 20.00% 50V	C366	1-126-933-11	ELECT	100UF 20.00% 16V
C229	1-126-961-11	ELECT	2.2UF 20.00% 50V	C369	1-137-194-81	FILM	0.47UF 5.00% 50V
C230	1-135-834-91	CERAMIC CHIP	2.2E+06PF 6.3V	C400	1-126-934-11	ELECT	220UF 20.00% 16V
C231	1-135-834-91	CERAMIC CHIP	2.2E+06PF 6.3V	C403	1-115-156-11	CERAMIC CHIP	1UF 10V
C232	1-135-834-91	CERAMIC CHIP	2.2E+06PF 6.3V	C404	1-126-960-11	ELECT	1UF 20.00% 50V
C234	1-107-823-11	CERAMIC CHIP	0.47UF 10.00% 16V	C405	1-126-960-11	ELECT	1UF 20.00% 50V
C236	1-126-960-11	ELECT	1UF 20.00% 50V	C406	1-115-156-11	CERAMIC CHIP	1UF 10V
C237	1-126-951-11	ELECT	470UF 20.00% 35V	C407	1-126-934-11	ELECT	220UF 20.00% 16V
C240	1-135-834-91	CERAMIC CHIP	2.2E+06PF 6.3V	C408	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C241	1-163-018-00	CERAMIC CHIP (KV-HA14L80)	0.0056UF 10.00% 50V	C409	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C241	1-162-967-11	CERAMIC CHIP (KV-HA14P50)	0.0033UF 10.00% 50V	C410	1-126-933-11	ELECT	100UF 20.00% 16V
C242	1-163-018-00	CERAMIC CHIP (KV-HA14L80)	0.0056UF 10.00% 50V	C411	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C242	1-162-967-11	CERAMIC CHIP (KV-HA14P50)	0.0033UF 10.00% 50V	C412	1-128-551-11	ELECT	22UF 20.00% 25V
C300	1-162-924-11	CERAMIC CHIP	56PF 5.00% 50V	C414	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C301	1-162-920-11	CERAMIC CHIP	27PF 5.00% 50V	C418	1-126-933-11	ELECT	100UF 20.00% 16V
C304	1-119-662-91	CERAMIC CHIP	150PF 1.00% 50V	C425	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V
C305	1-126-933-11	ELECT	100UF 20.00% 16V	C426	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V
C306	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V	C435	1-126-934-11	ELECT	220UF 20.00% 16V
C310	1-163-131-00	CERAMIC CHIP	390PF 5.00% 50V	C500	1-126-933-11	ELECT	100UF 20.00% 16V
C312	1-162-916-11	CERAMIC CHIP	12PF 5.00% 50V	C501	1-104-666-11	ELECT	220UF 20.00% 25V
C315	1-126-961-11	ELECT	2.2UF 20.00% 50V	C502	1-104-666-11	ELECT	220UF 20.00% 25V
C316	1-162-923-11	CERAMIC CHIP (KV-HA14L80 ONLY)	47PF 5.00% 50V	C503	1-162-318-11	CERAMIC	0.001UF 10.00% 500V
C317	1-216-295-91	SHORT	0	C504	1-162-318-11	CERAMIC	0.001UF 10.00% 500V
C318	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C505	1-123-024-21	ELECT	33UF 160V
C319	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C507	1-102-228-00	CERAMIC	470PF 10.00% 500V
C320	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C508	1-107-654-11	ELECT	33UF 20.00% 250V
C321	1-126-963-11	ELECT	4.7UF 20.00% 50V	C509	1-137-350-11	MYLAR	0.015UF 10.00% 100V
C323	1-162-927-11	CERAMIC CHIP	100PF 5.00% 50V	C510	1-106-379-12	MYLAR	0.033UF 10.00% 100V
C327	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C552	1-137-194-81	FILM	0.47UF 5.00% 50V
C328	1-164-222-91	CERAMIC CHIP	0.22UF 25V	C554	1-163-035-00	CERAMIC CHIP	0.047UF 50V
C329	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C555	1-126-949-11	ELECT	220UF 20.00% 35V
C330	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C556	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C332	1-126-933-11	ELECT	100UF 20.00% 16V	C557	1-126-948-11	ELECT	100UF 20.00% 35V
C335	1-126-947-11	ELECT	47UF 20.00% 16V	C558	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C337	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C559	1-106-220-00	MYLAR	0.1UF 10.00% 100V
C339	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C561	1-162-968-11	CERAMIC CHIP	0.0047UF 10.00% 50V
C342	1-163-038-91	CERAMIC CHIP	0.1UF 25V	C562	1-137-401-11	MYLAR	0.22UF 10.00% 100V
				C600	1-161-830-00	CERAMIC	0.0047UF 99% 500V
				C601	$\triangle$ 1-115-165-11	FILM	0.1UF 20.00% 275V
				C602	1-117-751-11	ELECT(BLOCK)	220UF 20.00% 450V

A

The components identified by shading
and mark Δ are critical for safety.
Replace only with part number specified.

REF NO.	PART NO.	DESCRIPTION	REMARK
C603	1-117-619-11	FILM	1000PF 3.00% 1.2KV
C604	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C605	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C606	1-104-666-11	ELECT	220UF 20.00% 25V
C607	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C608	1-161-830-00	CERAMIC	0.0047UF 99% 500V
C609	1-162-962-11	CERAMIC CHIP	470PF 10.00% 50V
C610	1-126-948-11	ELECT	100UF 20.00% 35V
C611	1-163-145-00	CERAMIC CHIP	0.0015UF 5.00% 50V
C612	1-119-886-51	CERAMIC	470PF 10.00% 250V
C613	1-102-228-00	CERAMIC	470PF 10.00% 500V
C614	1-123-024-21	ELECT	33UF 160V
C615	1-102-228-00	CERAMIC	470PF 10.00% 500V
C616	1-126-943-11	ELECT	2200UF 20.00% 25V
C617	1-126-942-61	ELECT	1000UF 20.00% 25V
C618	1-126-933-11	ELECT	100UF 20.00% 16V
C619	Δ 1-119-886-51	CERAMIC	470PF 10.00% 250V
C620	1-162-134-11	CERAMIC	470PF 10.00% 2KV
C621	1-117-703-41	CERAMIC	0.0047UF 99% 250V
C626	1-106-383-00	MYLAR	0.047UF 10.00% 200V
C628	1-162-962-11	CERAMIC CHIP	470PF 10.00% 50V
C800	1-126-960-11	ELECT	1UF 20.00% 50V
C801	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C802	1-106-375-12	MYLAR	0.022UF 99% 200V
C803	1-102-244-00	CERAMIC	220PF 10.00% 500V
C804	1-162-318-11	CERAMIC	0.001UF 10.00% 500V
C807	1-162-115-00	CERAMIC	330PF 10.00% 2KV
C808	1-106-365-00	MYLAR	0.0082UF 10.00% 200V
C809	1-107-364-11	MYLAR	0.01UF 10.00% 200V
C810	1-106-375-12	MYLAR	0.022UF 99% 200V
C811	1-107-957-11	ELECT	1UF 20.00% 250V
C812	1-117-664-11	FILM	0.27UF 5.00% 250V
C813	1-161-754-00	CERAMIC	0.001UF 10.00% 2KV
C814	1-117-644-11	FILM	10000PF 3.00% 1.2KV
C852	1-117-661-71	FILM	0.15UF 5.00% 250V
C856	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V
C857	1-126-964-11	ELECT	10UF 20.00% 50V
C858	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C859	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C860	1-208-834-11	METAL CHIP	150K 0.5% 1/10W
C863	1-216-295-91	SHORT	0
C865	1-126-933-11	ELECT	100UF 20.00% 16V
C866	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C867	1-162-966-11	CERAMIC CHIP	0.0022UF 10.00% 50V
C868	1-162-995-11	CERAMIC CHIP	0.022UF 50V
C869	1-115-339-11	CERAMIC CHIP	0.1UF 10.00% 50V
C870	1-162-960-11	CERAMIC CHIP	220PF 10.00% 50V
C872	1-163-038-91	CERAMIC CHIP	0.1UF 25V
C873	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C874	1-162-974-11	CERAMIC CHIP	0.01UF 50V
C875	1-163-038-91	CERAMIC CHIP	0.1UF 25V
<FILTER>			
CF355	1-234-686-21	FILTER, BAND PASS (F5.5C)	
<CONNECTOR>			
CN003	* 1-508-797-00	PIN, CONNECTOR 4P	
CN200	* 1-564-507-11	PLUG, CONNECTOR 4P	
CN300	* 1-564-509-11	PLUG, CONNECTOR 6P	

REF NO.	PART NO.	DESCRIPTION	REMARK
CN500	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN600	* 1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P	
CN601	* 1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P	
CN602	1-580-843-11	PIN, CONNECTOR (POWER)	
<TRIMMER>			
CT131	1-767-774-22	TRAP, CERAMIC	
CT139	1-767-775-22	TRAP, CERAMIC	
CT355	1-795-343-21	TRAP, CERAMIC (T55B)	
<DIODE>			
D001	8-719-083-18	DIODE SPB-25MVWF	
D004	8-719-911-19	1SS119-25	
D005	1-162-318-11	CERAMIC	0.001UF 10.00% 500V
D006	8-719-109-89	RD5.6ESB2	
D007	8-719-159-10	RD5.1SB-T2	
D009	8-719-159-10	RD5.1SB-T2	
D103	8-759-157-40	UPC574J	
D104	8-719-914-42	DA204K	
D200	8-719-914-42	DA204K	
D202	8-719-988-61	1SS355TE-17	
D203	8-719-988-61	1SS355TE-17	
D304	8-719-063-66	HZS361-TE	
D305	8-719-988-61	1SS355TE-17	
D306	8-719-109-54	RD2.2ES-B2	
D307	8-719-988-61	1SS355TE-17	
D308	8-719-988-61	1SS355TE-17	
D309	8-719-069-60	UDZSTE-179.1B	
D310	8-719-911-19	1SS119-25	
D311	8-719-070-15	NNCD8.2A-T1	
D312	8-719-069-60	UDZSTE-179.1B	
D314	8-719-908-03	GP08D	
D315	8-719-988-61	1SS355TE-17	
D318	8-719-988-61	1SS355TE-17	
D319	8-719-988-61	1SS355TE-17	
D320	8-719-988-61	1SS355TE-17	
D321	8-719-988-61	1SS355TE-17	
D322	8-719-069-60	UDZSTE-179.1B	
D323	8-719-069-60	UDZSTE-179.1B	
D324	8-719-069-60	UDZSTE-179.1B	
D325	8-719-069-60	UDZSTE-179.1B	
D327	8-719-988-61	1SS355TE-17	
D400	8-719-988-61	1SS355TE-17	
D401	8-719-988-61	1SS355TE-17	
D402	8-719-070-16	NNCD9.1A-T1	
D403	8-719-069-60	UDZSTE-179.1B	
D404	8-719-069-60	UDZSTE-179.1B	
D405	8-719-070-16	NNCD9.1A-T1	
D406	8-719-069-60	UDZSTE-179.1B	
D407	8-719-069-60	UDZSTE-179.1B	
D500	8-719-911-19	1SS119-25	
D501	8-719-911-19	1SS119-25	
D502	8-719-302-43	EL1Z	
D503	8-719-302-43	EL1Z	
D504	8-719-302-43	EL1Z	
D552	8-719-908-03	GP08D	
D553	8-719-109-89	RD5.6ESB2	
D600	8-719-030-33	DIODE EG01CV1	
D601	8-719-077-77	D3SB60F3	

The components identified by shading
and mark $\triangle$ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION	REMARK
D602	8-719-084-25	DIODE RM2LF-C4	
D603	8-719-110-39	RD15ES-B1	
D604	8-719-063-70	D1NL20U	
D605	8-719-063-70	D1NL20U	
D606	8-719-063-70	D1NL20U	
D607	8-719-027-22	D3S6M-F	
D608	8-719-312-10	RU4AM-T3	
D609	8-719-510-73	S3L20UF4	
D800	8-719-911-19	ISS119-25	
D802	8-719-908-03	GP08D	
D803	8-719-908-03	GP08D	
D804	8-719-081-00	DIODE BY228/A52A/	
D805	8-719-069-60	UDZSTE-179.1B	
D851	8-719-979-85	EGP20G	
D853	8-719-988-61	ISS355TE-17	
D854	8-719-158-53	RD13SB2	
<CONNECTOR>			
DY1	* 1-580-798-11	CONNECTOR PIN (DY) 6P	
<FUSE>			
F600	$\triangle$ 1-532-237-11	FUSE, TIME-LAG (BET) 3.15A/250V	
<FERRITE BEAD>			
FB001	1-410-397-21	FERRITE 1.1UH	
FB100	1-410-396-71	FERRITE 0.45UH	
FB603	1-412-911-31	FERRITE 0UH	
FB604	1-410-397-21	FERRITE 1.1UH	
FB800	1-410-397-21	FERRITE 1.1UH	
<IC>			
IC001	8-752-925-65	IC CXP85224A-080S (KV-HA14L80)	
IC001	8-752-928-47	IC CXP85224A-085S (KV-HA14P50)	
IC002	8-759-371-21	MM1319AFBE	
IC003	8-759-672-78	M24C08-BN6(A)	
IC004	8-742-225-20	IC SBX3081-21	
IC201	8-759-476-86	TDA7438D013TR	
IC203	6-700-034-01	IC AN5276	
IC301	6-700-146-01	IC TDA8844/N2 (KV-HA14L80)	
IC301	6-700-145-01	IC TDA8843/N2 (KV-HA14P50)	
IC402	8-759-649-89	IC MC4558CD	
IC551	8-759-835-98	IC AN5522	
IC601	8-749-019-43	IC STR-F6706A	
IC602	8-749-920-61	SE-135N	
IC604	8-759-544-13	IC KA78R09TU	
IC850	8-759-700-07	NJM2903M	
IC851	8-759-649-89	IC MC4558CD	
<JACK>			
J200	1-770-786-11	JACK	
J400	1-779-850-11	JACK BLOCK, PIN 6P	
J401	1-770-329-11	JACK, PIN 3P	
<CHIP CONDUCTOR>			
JR001	1-216-295-91	SHORT 0	
JR003	1-216-295-91	SHORT 0	

REF NO.	PART NO.	DESCRIPTION	REMARK
JR006	1-216-295-91	SHORT 0	
JR013	1-216-295-91	SHORT 0	
JR014	1-216-295-91	SHORT 0	
JR015	1-216-295-91	SHORT 0	
JR016	1-216-295-91	SHORT 0	
JR018	1-216-295-91	SHORT 0	
JR020	1-216-295-91	SHORT 0	
JR035	1-216-295-91	SHORT 0	
JR036	1-216-295-91	SHORT 0	
JR100	1-216-295-91	SHORT 0	
JR205	1-216-295-91	SHORT 0	
JR210	1-216-295-91	SHORT 0	
JR212	1-216-295-91	SHORT 0	
JR214	1-216-295-91	SHORT 0	
JR300	1-216-295-91	SHORT 0	
JR304	1-216-295-91	SHORT 0	
JR400	1-216-295-91	SHORT 0	
<COIL>			
L001	1-414-855-31	INDUCTOR 1UH	
L002	1-414-184-41	INDUCTOR 15UH	
L100	1-414-856-11	INDUCTOR 10UH	
L101	1-410-498-11	INDUCTOR 1.2UH	
L102	1-410-985-42	INDUCTOR 0.22UH	
L103	1-410-987-42	INDUCTOR 0.33UH	
L200	1-249-403-11	CARBON 68 5% 1/4W	
L200	1-249-401-11	CARBON 47 5% 1/4W	
L300	1-410-511-11	INDUCTOR 15UH	
L305	1-410-510-11	INDUCTOR 12UH	
L308	1-410-501-11	INDUCTOR 2.2UH	
L310	1-408-608-31	INDUCTOR 27UH	
L400	1-414-187-11	INDUCTOR 47UH	
L500	1-408-947-00	INDUCTOR 2.2MH	
L600	1-412-533-21	INDUCTOR 47UH	
L601	1-414-487-41	INDUCTOR 1UH	
L800	1-406-677-11	INDUCTOR 10MH	
L802	1-424-795-11	COIL, HORIZONTAL LINEARITY	
L803	1-414-493-41	INDUCTOR 4.7MH	
<PHOTO COUPLER>			
PH600	$\triangle$ 8-749-010-64	PC123F2	
<IC LINK>			
PS600	1-533-597-41	LINK, IC	
PS601	1-533-597-41	LINK, IC	
PS601	1-533-597-41	LINK, IC	
<TRANSISTOR>			
Q001	8-729-421-19	UN2213	
Q002	8-729-421-19	UN2213	
Q003	8-729-010-25	MSD601-RT1	
Q004	8-729-010-25	MSD601-RT1	
Q005	8-729-421-19	UN2213	
Q100	8-729-010-25	MSD601-RT1	
Q102	8-729-022-54	TRANSISTOR 2SC3779C,D-AA	
Q105	8-729-010-25	MSD601-RT1	



REF NO.	PART NO.	DESCRIPTION	REMARK			
Q106	8-729-010-25	MSD601-RT1				
Q201	8-729-010-25	MSD601-RT1				
Q202	8-729-036-56	2SK208-GR-TE85L				
Q203	8-729-010-25	MSD601-RT1				
Q204	8-729-216-22	2SA1162-G				
Q205	8-729-421-22	UN2211				
Q208	1-801-806-11	TR DTC144EKA				
Q301	8-729-010-05	MSB709-RT1				
Q303	8-729-010-25	MSD601-RT1				
Q305	8-729-010-05	MSB709-RT1				
Q309	8-729-010-25	MSD601-RT1				
Q314	8-729-421-22	UN2211 (KV-HA14L80 ONLY)				
Q315	8-729-010-25	MSD601-RT1				
Q318	8-729-010-25	MSD601-RT1				
Q320	8-729-421-22	UN2211				
Q400	8-729-010-05	MSB709-RT1				
Q401	8-729-424-67	UN2216				
Q402	8-729-424-67	UN2216				
Q403	8-729-010-05	MSB709-RT1				
Q404	8-729-010-05	MSB709-RT1				
Q405	8-729-010-05	MSB709-RT1				
Q406	8-729-010-25	MSD601-RT1				
Q407	8-729-010-25	MSD601-RT1				
Q500	8-729-200-17	2SA1091-O				
Q800	8-729-140-50	2SC3209LK				
Q801	8-729-055-74	TRANSISTOR 2SD2624-CA				
Q802	8-729-050-48	TRANSISTOR IRF614-005				
Q850	8-729-010-25	MSD601-RT1				
Q851	8-729-010-05	MSB709-RT1				
		<RESISTOR>				
R001	1-216-071-00	RES-CHIP	8.2K	5%	1/10W	
R002	1-216-071-00	RES-CHIP	8.2K	5%	1/10W	
R003	1-216-059-00	RES-CHIP	2.7K	5%	1/10W	
R004	1-216-059-00	RES-CHIP	2.7K	5%	1/10W	
R005	1-216-043-91	RES-CHIP	560	5%	1/10W	
R006	1-216-043-91	RES-CHIP	560	5%	1/10W	
R007	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R008	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R009	1-216-037-00	RES-CHIP	330	5%	1/10W	
R010	1-216-037-00	RES-CHIP	330	5%	1/10W	
R011	1-216-295-91	SHORT	0			
R012	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R013	1-216-021-00	RES-CHIP	68	5%	1/10W	
R014	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R015	1-216-025-11	RES-CHIP	100	5%	1/10W	
R016	1-216-037-00	RES-CHIP	330	5%	1/10W	
R017	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R018	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R019	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R020	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R022	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R024	1-216-025-11	RES-CHIP	100	5%	1/10W	
R025	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R026	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R027	1-216-101-00	RES-CHIP	150K	5%	1/10W	
R028	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R029	1-216-025-11	RES-CHIP	100	5%	1/10W	
R031	1-216-025-11	RES-CHIP	100	5%	1/10W	
R032	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R033	1-216-073-91	RES-CHIP	10K	5%	1/10W	

REF NO.	PART NO.	DESCRIPTION				REMARK
R034	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R035	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R036	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	
R037	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R038	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R039	1-216-043-91	RES-CHIP	560	5%	1/10W	
R042	1-216-039-00	RES-CHIP	390	5%	1/10W	
R043	1-216-025-11	RES-CHIP	100	5%	1/10W	
R044	1-216-033-00	RES-CHIP	220	5%	1/10W	
R045	1-216-073-91	RES-CHIP	10K	5%	1/10W	
R046	1-216-685-11	METAL CHIP	27K	0.5%	1/10W	
R047	1-216-025-11	RES-CHIP	100	5%	1/10W	
R048	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R049	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R050	1-208-820-11	METAL CHIP	39K	0.5%	1/10W	
R051	1-216-073-91	RES-CHIP	10K	5%	1/10W	
R052	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R053	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R054	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R055	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R056	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R057	1-216-025-11	RES-CHIP	100	5%	1/10W	
R058	1-216-025-11	RES-CHIP	100	5%	1/10W	
R059	1-216-033-00	RES-CHIP	220	5%	1/10W	
R060	1-216-033-00	RES-CHIP	220	5%	1/10W	
R061	1-216-033-00	RES-CHIP	220	5%	1/10W	
R065	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R066	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R072	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R073	1-216-081-00	RES-CHIP	22K	5%	1/10W	
R074	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R077	1-216-025-11	RES-CHIP	100	5%	1/10W	
R100	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R103	1-211-981-11	METAL CHIP	33	0.5%	1/10W	
R106	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R107	1-216-063-91	RES-CHIP	3.9K	5%	1/10W	
R108	1-216-041-00	RES-CHIP	470	5%	1/10W	
R109	1-216-019-00	RES-CHIP	56	5%	1/10W	
R115	1-216-065-91	RES-CHIP	4.7K	5%	1/10W	
R117	1-216-081-00	RES-CHIP	22K	5%	1/10W	
R118	1-216-041-00	RES-CHIP	470	5%	1/10W	
R119	1-216-081-00	RES-CHIP	22K	5%	1/10W	
R120	1-216-055-00	RES-CHIP	1.8K	5%	1/10W	
R121	1-216-081-00	RES-CHIP	22K	5%	1/10W	
R122	1-216-109-00	RES-CHIP	330K	5%	1/10W	
R123	1-216-081-00	RES-CHIP	22K	5%	1/10W	
R124	1-216-081-00	RES-CHIP	22K	5%	1/10W	
R125	1-215-925-11	METAL OXIDE	22K	5%	3W	
R128	1-216-025-11	RES-CHIP	100	5%	1/10W	
R129	1-211-977-11	METAL CHIP	22	0.5%	1/10W	
R130	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R133	1-249-389-11	CARBON	4.7	5%	1/4W	
R134	1-216-295-91	SHORT	0			
R135	1-216-295-91	SHORT	0			
R200	1-216-061-91	RES-CHIP	3.3K	5%	1/10W	
R201	1-216-061-91	RES-CHIP (KV-HA14L80)	3.3K	5%	1/10W	
R201	1-216-069-00	RES-CHIP (KV-HA14P50)	6.8K	5%	1/10W	
R202	1-216-081-00	RES-CHIP	22K	5%	1/10W	

A

REF NO.	PART NO.	DESCRIPTION	REMARK	REF NO.	PART NO.	DESCRIPTION	REMARK
R203	1-216-053-00	RES-CHIP (KV-HA14L80)	1.5K 5% 1/10W	R345	1-216-025-11	RES-CHIP	100 5% 1/10W
R203	1-216-065-91	RES-CHIP (KV-HA14P50)	4.7K 5% 1/10W	R348	1-216-025-11	RES-CHIP	100 5% 1/10W
R204	1-216-061-91	RES-CHIP	3.3K 5% 1/10W	R350	1-216-039-00	RES-CHIP	390 5% 1/10W
R205	1-216-081-00	RES-CHIP	22K 5% 1/10W	R353	1-216-119-00	RES-CHIP	820K 5% 1/10W
R206	1-216-069-00	RES-CHIP	6.8K 5% 1/10W	R354	1-216-119-00	RES-CHIP	820K 5% 1/10W
R207	1-216-069-00	RES-CHIP	6.8K 5% 1/10W	R355	1-216-061-91	RES-CHIP	3.3K 5% 1/10W
R208	1-216-073-91	RES-CHIP	10K 5% 1/10W	R356	1-216-061-91	RES-CHIP	3.3K 5% 1/10W
R209	1-216-073-91	RES-CHIP	10K 5% 1/10W	R357	1-216-101-00	RES-CHIP	150K 5% 1/10W
R210	1-249-409-11	CARBON	220 5% 1/4W	R358	1-216-025-11	RES-CHIP	100 5% 1/10W
R211	1-249-409-11	CARBON	220 5% 1/4W	R360	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R212	1-216-049-11	RES-CHIP	1K 5% 1/10W	R361	1-216-033-00	RES-CHIP	220 5% 1/10W
R214	1-216-295-91	SHORT	0	R362	1-216-083-00	RES-CHIP	27K 5% 1/10W
R215	1-216-067-00	RES-CHIP	5.6K 5% 1/10W	R363	1-216-295-91	SHORT	0
R216	1-216-067-00	RES-CHIP	5.6K 5% 1/10W	R364	1-216-077-91	RES-CHIP	15K 5% 1/10W
R217	1-216-059-00	RES-CHIP	2.7K 5% 1/10W	R365	1-216-295-91	SHORT	0
R218	1-216-059-00	RES-CHIP	2.7K 5% 1/10W	R367	1-216-099-00	RES-CHIP	120K 5% 1/10W
R219	1-216-025-11	RES-CHIP	100 5% 1/10W	R368	1-216-049-11	RES-CHIP	1K 5% 1/10W
R220	1-216-025-11	RES-CHIP	100 5% 1/10W	R369	1-216-123-11	RES-CHIP	1.2M 5% 1/10W
R221	1-216-025-11	RES-CHIP	100 5% 1/10W	R370	1-216-083-00	RES-CHIP	27K 5% 1/10W
R222	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R371	1-208-820-11	METAL CHIP	39K 0.5% 1/10W
R225	1-216-077-91	RES-CHIP	15K 5% 1/10W	R374	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R228	1-216-295-91	SHORT	0	R376	1-216-295-91	SHORT	0
R229	1-216-053-00	RES-CHIP	1.5K 5% 1/10W	R389	1-216-109-00	RES-CHIP	330K 5% 1/10W
R230	1-216-053-00	RES-CHIP	1.5K 5% 1/10W	R390	1-208-822-11	METAL CHIP	47K 0.5% 1/10W
R231	1-216-049-11	RES-CHIP	1K 5% 1/10W	R391	1-208-822-11	METAL CHIP	47K 0.5% 1/10W
R234	1-216-113-00	RES-CHIP	470K 5% 1/10W	R392	1-216-069-00	RES-CHIP	6.8K 5% 1/10W
R235	1-216-113-00	RES-CHIP	470K 5% 1/10W	R393	1-216-295-91	SHORT	0
R240	1-216-077-91	RES-CHIP	15K 5% 1/10W	R400	1-216-295-91	SHORT	0
R241	1-216-077-91	RES-CHIP	15K 5% 1/10W	R401	1-216-049-11	RES-CHIP	1K 5% 1/10W
R242	1-216-073-91	RES-CHIP	10K 5% 1/10W	R402	1-216-025-11	RES-CHIP	100 5% 1/10W
R243	1-216-073-91	RES-CHIP	10K 5% 1/10W	R403	1-216-073-91	RES-CHIP	10K 5% 1/10W
R244	1-216-113-00	RES-CHIP	470K 5% 1/10W	R404	1-216-049-11	RES-CHIP	1K 5% 1/10W
R248	1-216-093-91	RES-CHIP	68K 5% 1/10W	R405	1-216-073-91	RES-CHIP	10K 5% 1/10W
R249	1-216-049-11	RES-CHIP	1K 5% 1/10W	R406	1-216-113-00	RES-CHIP	470K 5% 1/10W
R300	1-216-033-00	RES-CHIP	220 5% 1/10W	R407	1-216-049-11	RES-CHIP	1K 5% 1/10W
R302	1-216-033-00	RES-CHIP	220 5% 1/10W	R408	1-216-049-11	RES-CHIP	1K 5% 1/10W
R304	1-216-051-00	RES-CHIP	1.2K 5% 1/10W	R409	1-216-113-00	RES-CHIP	470K 5% 1/10W
R306	1-216-039-00	RES-CHIP	390 5% 1/10W	R410	1-216-025-11	RES-CHIP	100 5% 1/10W
R307	1-216-033-00	RES-CHIP	220 5% 1/10W	R411	1-216-049-11	RES-CHIP	1K 5% 1/10W
R310	1-216-039-00	RES-CHIP	390 5% 1/10W	R412	1-216-049-11	RES-CHIP	1K 5% 1/10W
R311	1-216-057-00	RES-CHIP	2.2K 5% 1/10W	R413	1-216-113-00	RES-CHIP	470K 5% 1/10W
R312	1-216-033-00	RES-CHIP	220 5% 1/10W	R414	1-216-049-11	RES-CHIP	1K 5% 1/10W
R314	1-216-037-00	RES-CHIP	330 5% 1/10W	R415	1-216-073-91	RES-CHIP	10K 5% 1/10W
R316	1-216-031-00	RES-CHIP	180 5% 1/10W	R416	1-216-073-91	RES-CHIP	10K 5% 1/10W
R320	1-216-081-00	RES-CHIP	22K 5% 1/10W	R417	1-216-021-00	RES-CHIP	68 5% 1/10W
R323	1-216-041-00	RES-CHIP	470 5% 1/10W	R418	1-216-025-11	RES-CHIP	100 5% 1/10W
R327	1-216-049-11	RES-CHIP	1K 5% 1/10W	R419	1-208-820-11	METAL CHIP	39K 0.5% 1/10W
R328	1-216-025-11	RES-CHIP	100 5% 1/10W	R420	1-216-049-11	RES-CHIP	1K 5% 1/10W
R329	1-216-043-91	RES-CHIP	560 5% 1/10W	R421	1-216-049-11	RES-CHIP	1K 5% 1/10W
R330	1-216-295-91	SHORT	0	R422	1-216-091-00	RES-CHIP	56K 5% 1/10W
R331	1-216-295-91	SHORT	0	R423	1-208-820-11	METAL CHIP	39K 0.5% 1/10W
R332	1-216-295-91	SHORT	0	R424	1-216-091-00	RES-CHIP	56K 5% 1/10W
R333	1-216-025-11	RES-CHIP	100 5% 1/10W	R425	1-216-022-00	RES-CHIP	75 5% 1/10W
R334	1-216-025-11	RES-CHIP	100 5% 1/10W	R426	1-216-049-11	RES-CHIP	1K 5% 1/10W
R335	1-216-025-11	RES-CHIP	100 5% 1/10W	R427	1-216-051-00	RES-CHIP	1.2K 5% 1/10W
R336	1-216-025-11	RES-CHIP	100 5% 1/10W	R428	1-216-041-00	RES-CHIP	470 5% 1/10W
R337	1-216-073-91	RES-CHIP	10K 5% 1/10W	R429	1-216-073-91	RES-CHIP	10K 5% 1/10W
R339	1-216-035-00	RES-CHIP	270 5% 1/10W	R430	1-216-063-91	RES-CHIP	3.9K 5% 1/10W
R340	1-162-974-11	CERAMIC CHIP	0.01UF 50V	R431	1-216-091-00	RES-CHIP	56K 5% 1/10W
R342	1-216-295-91	SHORT	0	R432	1-216-121-11	RES-CHIP	1M 5% 1/10W
				R433	1-216-091-00	RES-CHIP	56K 5% 1/10W
				R434	1-216-049-11	RES-CHIP	1K 5% 1/10W



The components identified by shading
and mark $\triangle$ are critical for safety.
Replace only with part number specified.

REF NO.	PART NO.	DESCRIPTION	REMARK
R435	1-216-121-11	RES-CHIP	1M 5% 1/10W
R436	1-216-022-00	RES-CHIP	75 5% 1/10W
R438	1-216-049-11	RES-CHIP	1K 5% 1/10W
R440	1-216-121-11	RES-CHIP	1M 5% 1/10W
R443	1-216-121-11	RES-CHIP	1M 5% 1/10W
R445	1-216-089-91	RES-CHIP	47K 5% 1/10W
R446	1-216-089-91	RES-CHIP	47K 5% 1/10W
R500	1-260-126-81	CARBON	180K 5% 1/2W
R501	1-249-418-11	CARBON	1.2K 5% 1/4W
R502	1-216-371-00	METAL OXIDE	1.5 5% 2W
R503	1-216-091-00	RES-CHIP	56K 5% 1/10W
R504	1-216-091-00	RES-CHIP	56K 5% 1/10W
R505	1-216-065-91	RES-CHIP	4.7K 5% 1/10W
R506	1-260-125-11	CARBON	150K 5% 1/2W
R507	1-260-288-11	CARBON	0.47 5% 1/2W
R508	1-260-288-11	CARBON	0.47 5% 1/2W
R509	1-260-288-11	CARBON	0.47 5% 1/2W
R510	1-260-127-11	CARBON	220K 5% 1/2W
R511	1-215-463-00	METAL	56K 1% 1/4W
R512	1-215-453-00	METAL	22K 1% 1/4W
R513	1-215-449-00	METAL	15K 1% 1/4W
R514	1-249-421-11	CARBON	2.2K 5% 1/4W
R553	1-249-385-11	CARBON	2.2 5% 1/4W
R554	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R557	1-216-655-11	METAL CHIP	1.5K 0.5% 1/10W
R558	1-216-081-00	RES-CHIP	22K 5% 1/10W
R559	1-216-089-91	RES-CHIP	47K 5% 1/10W
R563	1-216-655-11	METAL CHIP	1.5K 0.5% 1/10W
R564	1-215-865-11	METAL OXIDE	220 5% 1W
R565	1-216-350-11	METAL OXIDE	1.2 5% 1W
R567	1-208-790-11	METAL CHIP	2.2K 0.5% 1/10W
R568	1-215-457-00	METAL	33K 1% 1/4W
R600	1-215-915-11	METAL OXIDE	470 5% 3W
R602	1-220-820-31	CEMENTED	1.5 5% 10W
R605	1-207-615-00	METAL	0.33 10% 2W
R606	1-216-045-00	RES-CHIP	680 5% 1/10W
R608	1-260-129-11	CARBON	330K 5% 1/2W
R609	1-216-097-11	RES-CHIP	100K 5% 1/10W
R610	1-215-926-00	METAL OXIDE	33K 5% 3W
R611	1-216-061-91	RES-CHIP	3.3K 5% 1/10W
R612	1-249-419-11	CARBON	1.5K 5% 1/4W
R615	1-215-877-11	METAL OXIDE	22K 5% 1W
R617	1-216-049-11	RES-CHIP	1K 5% 1/10W
R619	$\triangle$ 1-240-917-81	METAL	8.2M 5% 1W
R620	1-249-389-11	CARBON	4.7 5% 1/4W
R623	1-216-053-00	RES-CHIP	1.5K 5% 1/10W
R624	1-260-125-11	CARBON	150K 5% 1/2W
R626	1-216-349-00	METAL OXIDE	1 5% 1W
R627	1-220-820-31	CEMENTED	1.5 5% 10W
R800	1-216-049-11	RES-CHIP	1K 5% 1/10W
R801	1-216-081-00	RES-CHIP	22K 5% 1/10W
R802	1-215-918-00	METAL OXIDE	1.5K 5% 3W
R803	1-260-332-51	CARBON	2.2K 5% 1/2W
R806	1-216-295-91	SHORT	0
R808	1-249-421-11	CARBON	2.2K 5% 1/4W
R810	1-215-886-11	METAL OXIDE	100 5% 2W
R811	1-215-911-11	METAL OXIDE	100 5% 3W
R812	1-215-918-00	METAL OXIDE	1.5K 5% 3W
R813	1-216-049-11	RES-CHIP	1K 5% 1/10W
R814	1-215-918-00	METAL OXIDE	1.5K 5% 3W
R860	1-216-103-00	RES-CHIP	180K 5% 1/10W
R861	1-216-295-91	SHORT	0

REF NO.	PART NO.	DESCRIPTION	REMARK
R862	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R863	1-216-073-91	RES-CHIP	10K 5% 1/10W
R864	1-208-794-11	METAL CHIP	3.3K 0.5% 1/10W
R865	1-216-073-91	RES-CHIP	10K 5% 1/10W
R866	1-216-049-11	RES-CHIP	1K 5% 1/10W
R867	1-208-812-11	METAL CHIP	18K 0.5% 1/10W
R868	1-249-393-11	CARBON	10 5% 1/4W
R869	1-249-381-11	CARBON	1 5% 1/4W
R870	1-216-103-00	RES-CHIP	180K 5% 1/10W
R874	1-215-475-00	METAL	180K 1% 1/4W
R878	1-216-049-11	RES-CHIP	1K 5% 1/10W
R879	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R880	1-216-097-11	RES-CHIP	100K 5% 1/10W
R881	1-216-085-91	RES-CHIP	33K 5% 1/10W
R882	1-216-073-91	RES-CHIP	10K 5% 1/10W
R883	1-216-067-00	RES-CHIP	5.6K 5% 1/10W
R884	1-216-089-91	RES-CHIP	47K 5% 1/10W
R885	1-216-073-91	RES-CHIP	10K 5% 1/10W
R886	1-216-295-91	SHORT	0
R887	1-215-477-00	METAL	220K 1% 1/4W
R888	1-215-477-00	METAL	220K 1% 1/4W
R889	1-208-832-11	METAL CHIP	120K 0.5% 1/10W
<VARIABLE RESISTOR>			
RV300	1-241-769-11	RES, ADJ, CARBON 470K	
<SWITCH>			
S001	1-692-431-21	SWITCH, TACTILE	
S002	1-692-431-21	SWITCH, TACTILE	
S003	1-692-431-21	SWITCH, TACTILE	
S004	1-692-431-21	SWITCH, TACTILE	
S005	1-692-431-21	SWITCH, TACTILE	
S006	1-692-431-21	SWITCH, TACTILE	
S600	$\triangle$ 1-571-433-31	SWITCH, PUSH (AC POWER)	
S800	1-572-707-11	SWITCH, LEVER	
<#####>			
SWF100	1-577-169-12	SAWF	
<TRANSFORMER>			
T503	$\triangle$ 1-453-309-21	TRANSFORMER ASSY FLYBACK (NX-4450//M3A4)	
T600	$\triangle$ 1-431-747-11	TRANSFORMER, LINE FILTER	
T601	$\triangle$ 1-437-333-21	TRANSFORMER, CONVERTER (SRT)	
T800	1-435-374-11	TRANSFORMER, FERRITE (HDT)	
<THERMISTOR>			
THP600	1-803-744-11	THERMISTOR, POSITIVE	
<TUNER>			
TU100	8-598-591-00	TUNER, VSS BT-AG402	

The components identified by shading
and mark $\triangle$ are critical for safety.
Replace only with part number specified.



REF NO.	PART NO.	DESCRIPTION	REMARK
---------	----------	-------------	--------

<VARISTOR>

VDR600	1-803-830-31	VARISTOR (ERZV14D621)	
--------	--------------	-----------------------	--

<CRYSTAL>

X001	1-577-358-21	VIBRATOR, CERAMIC	
X300	1-567-505-11	OSCILLATOR, CRYSTAL	
X301	1-567-504-11	OSCILLATOR, CRYSTAL	

* A-1332-226-A C BOARD MOUNTED

4-382-854-01 SCREW (M3X8), P, SW (+)

<CAPACITOR>

C701	1-115-350-51	CERAMIC	0.0047UF	2KV
C702	1-102-074-00	CERAMIC	0.001UF	10.00% 50V
C703	1-107-651-11	ELECT	4.7UF	20.00% 250V
C704	1-130-202-00	FILM	0.022UF	5.00% 400V
C708	1-102-114-00	CERAMIC	470PF	10.00% 50V
C709	1-102-114-00	CERAMIC	470PF	10.00% 50V
C710	1-102-114-00	CERAMIC	470PF	10.00% 50V
C712	1-102-114-00	CERAMIC	470PF	10.00% 50V
C713	1-102-114-00	CERAMIC	470PF	10.00% 50V
C714	1-102-114-00	CERAMIC	470PF	10.00% 50V
C716	1-126-933-11	ELECT	100UF	20.00% 16V
C717	1-102-106-00	CERAMIC	100PF	10.00% 50V
C718	1-126-933-11	ELECT	100UF	20.00% 16V
C719	1-102-116-00	CERAMIC	680PF	10.00% 50V
C736	1-102-114-00	CERAMIC	470PF	10.00% 50V
C737	1-102-114-00	CERAMIC	470PF	10.00% 50V
C746	1-102-114-00	CERAMIC	470PF	10.00% 50V

<#####>

CLP701 * 4-042-408-01 PIN, COATING LEAD

<CONNECTOR>

CN701	* 1-564-508-11	PLUG, CONNECTOR 5P	
CN702	1-695-915-11	TAB (CONTACT)	
CN703	* 1-564-509-11	PLUG, CONNECTOR 6P	
CN704	1-695-915-11	TAB (CONTACT)	

<DIODE>

D701	8-719-911-19	ISS119-25	
D702	8-719-911-19	ISS119-25	
D703	8-719-911-19	ISS119-25	
D707	8-719-911-19	ISS119-25	
D708	8-719-911-19	ISS119-25	

D709	8-719-911-19	ISS119-25	
D716	8-719-911-19	ISS119-25	
D717	8-719-070-16	NNCD9.1A-T1	

REF NO.	PART NO.	DESCRIPTION	REMARK
---------	----------	-------------	--------

<JACK>

J701	$\triangle$ 1-540-071-22	SOCKET, CRT	
------	--------------------------	-------------	--

<COIL>

L701	1-412-529-11	INDUCTOR	22UH
L706	1-414-191-11	INDUCTOR	150UH

<TRANSISTOR>

Q704	8-729-326-11	2SC2611	
Q705	8-729-326-11	2SC2611	
Q706	8-729-326-11	2SC2611	
Q707	8-729-200-17	2SA1091-O	
Q708	8-729-200-17	2SA1091-O	

Q709	8-729-200-17	2SA1091-O	
Q710	8-729-119-78	2SC2785-HFE	
Q711	8-729-119-78	2SC2785-HFE	
Q712	8-729-119-78	2SC2785-HFE	

<RESISTOR>

R703	1-219-752-11	CARBON	100K	5%	1/2W
R705	1-216-365-00	METAL OXIDE	0.47	5%	2W
R710	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R711	1-260-105-11	CARBON	3.3K	5%	1/2W
R712	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R713	1-260-107-11	CARBON	4.7K	5%	1/2W
R714	1-216-486-00	METAL OXIDE	8.2K	5%	3W
R715	1-260-107-11	CARBON	4.7K	5%	1/2W
R716	1-249-417-11	CARBON	1K	5%	1/4W
R717	1-249-417-11	CARBON	1K	5%	1/4W
R718	1-249-417-11	CARBON	1K	5%	1/4W
R725	1-249-424-11	CARBON	3.9K	5%	1/4W
R726	1-249-424-11	CARBON	3.9K	5%	1/4W
R727	1-249-424-11	CARBON	3.9K	5%	1/4W
R728	1-249-408-11	CARBON	180	5%	1/4W
R729	1-249-408-11	CARBON	180	5%	1/4W
R730	1-249-408-11	CARBON	180	5%	1/4W
R731	1-249-399-11	CARBON	33	5%	1/4W
R732	1-249-399-11	CARBON	33	5%	1/4W
R733	1-249-399-11	CARBON	33	5%	1/4W

R734	1-219-743-11	CARBON	100	5%	1/2W
R738	1-247-807-31	CARBON	100	5%	1/4W
R739	1-247-807-31	CARBON	100	5%	1/4W
R740	1-247-807-31	CARBON	100	5%	1/4W

<VARIABLE RESISTOR>

RV702	1-241-656-11	RES, ADJ, METAL FILM 110M	
-------	--------------	---------------------------	--

ACCESSORIES AND PACKING MATERIALS

1-501-372-81	ANTENNA, TELESCOPIC (KV-HA14L80)
1-417-151-22	MATCHING TRANSFORMER, ANTENNA (KV-HA14L80)

<u>REF NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REMARK</u>
	1-569-008-21	ADAPTOR, CONVERSION 2P (KV-HA14L80)	
*	4-085-263-01	INDIVIDUAL CARTON	
*	4-085-657-01	CUSHION, UPPER	
*	4-392-859-01	BAG, PROTECTION	
	4-085-922-11	MANUAL, INSTRUCTION (KV-HA14P50)	
	4-085-449-11	MANUAL, INSTRUCTION (KV-HA14L80)	

<u>REF NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>REMARK</u>
		BATTERY COVER REMOTE COMMANDER	

	1-477-047-11	REMOTE COMMANDER (RM-969)	
	4-084-290-01	BATTERY COVER REMOTE COMMANDER	